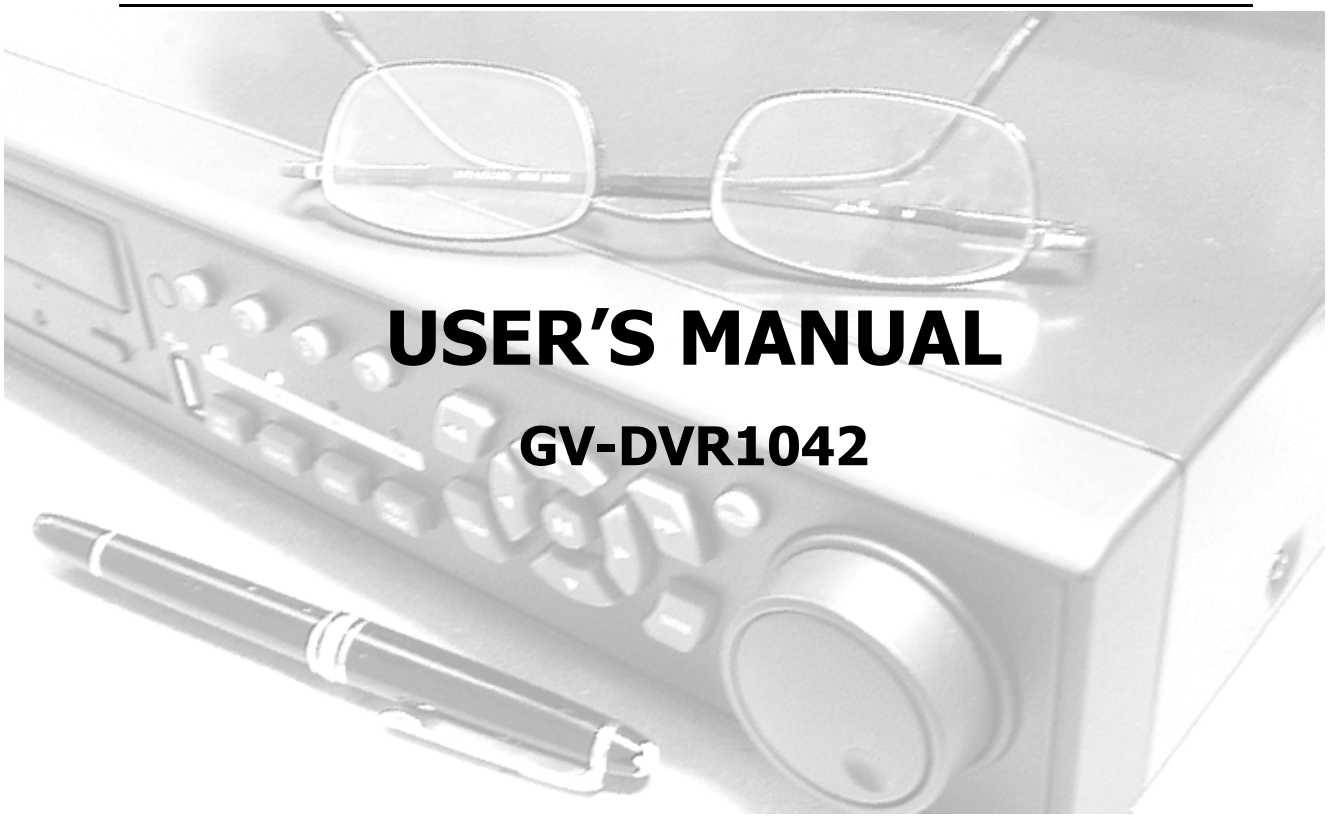

USER'S MANUAL

GV-DVR1042

Stand Alone
4 Channel

Real Time
DVR System

BEFORE INSTALLATION ---------- 5
MAIN FEATURES ---------- 6
SYSTEM ORGANIZATION ---------- 8
SYSTEM CONTENTS ---------- 9
SYSTE CONFIGURE ---------- 10
Front panel description ---------- 10
Rear panel description ---------- 11
Remote Controller description ---------- 12
CONNECT & POWER ON ---------- 13
LIVE DISPLAY CONFIGURE ---------- 14
Sequence ---------- 14
PTZ Camera control ---------- 14
SYSTEM SETUP ---------- 16
DISPLAY ---------- 17
OSD ---------- 17
Monitor ---------- 18
RECORD ---------- 19
Recording Operations ---------- 19
Continuous / Motion Record Schedule ---------- 20
Parameter ---------- 20
Schedule ---------- 23
Alarm Record Schedule ---------- 26
CAMERA ---------- 27
Covert / Title Setup ---------- 27
PTZ Setup ---------- 28
Color Setup ---------- 29
Motion Sensor ---------- 30
SOUND ---------- 33
Audio ---------- 33
Buzzer ---------- 34

EVENT / SENSOR ---------- 34
HDD Event ---------- 35
Alarm Input ---------- 35
Alarm Out ---------- 36
Buzzer Out ---------- 37
E-mail Notification ---------- 38
SYSTEM ---------- 39
Date / Time ---------- 39
Network ---------- 40
Mail ---------- 41
User Management ---------- 41
Disk Management ---------- 44
Control Device ---------- 46
Shutdown ---------- 46
SEARCH ---------- 47
Time Search ---------- 47
Event Search ---------- 50
ARCHIVING ---------- 52
REMOTE CLIENT SETUP ---------- 55
Client software installation ---------- 55
Client software organization ---------- 57
Explanation of Function keys ---------- 58
Create a connect group ---------- 59
Detail Setup ---------- 60
Additional Configuration ---------- 62
REMOTE SEARCH ---------- 63
Explanation of function keys ---------- 64
QUICK SEARCH ---------- 65
Archiving ---------- 66
Still Shot ---------- 66
Log Viewer ---------- 67

Backup Player ---------- 67
Print ---------- 68
Event Viewer ---------- 68
Remote Recording Setup ---------- 69
Record ---------- 69
Camera ---------- 70
Sound ---------- 70
Event / Sensor ---------- 71
System ---------- 72

BEFORE INSTALLATION

- Installation should be carried out only by qualified personnel and in accordance with any electrical regulations in force at the time.

- The DVR must be placed on a stable surface or mounted in an approved cabinet. Adequate ventilation must be provided, taking particular care not to block any of the air vents on the DVR.

- Adequate protection against lightning strikes and power surges must be installed to prevent damage to the DVR.

- Any safety warnings on the DVR and in these instructions must be adhered to.

- If cleaning is necessary, shutdown the DVR and disconnect power first. Use a soft dry cloth only never use any abrasive cleaners.

- Do not attempt to service or repair the DVR as opening or removing covers may expose dangerous voltages or other hazards. Refer all servicing to qualified service personnel.

MAIN FEATURES

MOUSE CONTROLL

Designed to be controlled by mouse and easy to use.

ENHANCED GRAPHICAL USER INTERFACE [GUI]

The DVR menu structure and on screen display is presented in a simple to use and logical GUI format.

GENUINE TRIPLEX OPERATION

The DVR will continue to record at full frame rate during local playback, local setup, multi user remote viewing and playback and remote setup.

AUDIO

4 audio inputs are supported which can be assigned to any video channel. Live and recorded audio can be Monitored remotely over the internet and remote 'talkback' audio transmission to the DVR is also possible.

BACKUP

Recorded footage (including audio) can be archived to USB memory stick or CD.
Playback software is embedded with the backup files and the backup also contains the system event log and backup log for full traceability.

REMOTE CONNECTION

Software is provided to allow remote connection to up to 4 DVRs in one session. Depending on user level, Full DVR control is available over the internet as well as the ability to remotely configure the DVR.
Alarm outputs on the DVR can be remotely triggered over the internet.

COMPREHENSIVE RECORDING SETUP

Recording can be scheduled, alarm activated or motion activated. For each type of recording, frame rates, image quality and audio recording properties can be adjusted per hour, per day and for each individual channel.
The DVR also has a panic recording feature (from the front panel or external input) which overrides all other recording settings to provide the best quality recording in the event of an emergency.

PTZ CONTROL

Full PTZ control is available from the front panel or remote connection and a wide number of speed Dome protocols are supported. Protocols can be set individually for each channel and PTZ speed can be adjusted to suit particular speed domes.

MAIN FEATURES

TELEMETRY CONTROL

Full telemetry control is available from the front panel or remote connection and a wide number of speed dome protocols are supported. Protocols can be set individually for each channel and telemetry speed can be adjusted to suit particular speed domes.

EXTENSIVE MONITOR SUPPORT

The DVR has 3 main monitor outputs (Composite, VGA and S-Video) which can be used simultaneously. Support is also provided for up to 4 spot monitors and each spot monitor output can be programmed in the DVR setup.

LIVE DISPLAY

The DVR displays single or multi screen images.

CONFIGURATION BACKUP

All configuration settings on the DVR can be saved to USB memory stick or a PC file remotely.
The saved data can then be uploaded to other DVR units allowing rapid deployment where more than one DVR is being installed.

EMAIL SUPPORT

The DVR can send emails to specific users to notify events such as alarm, motion detection, hard drive failure etc.

SYSTEM ORGANIZATION

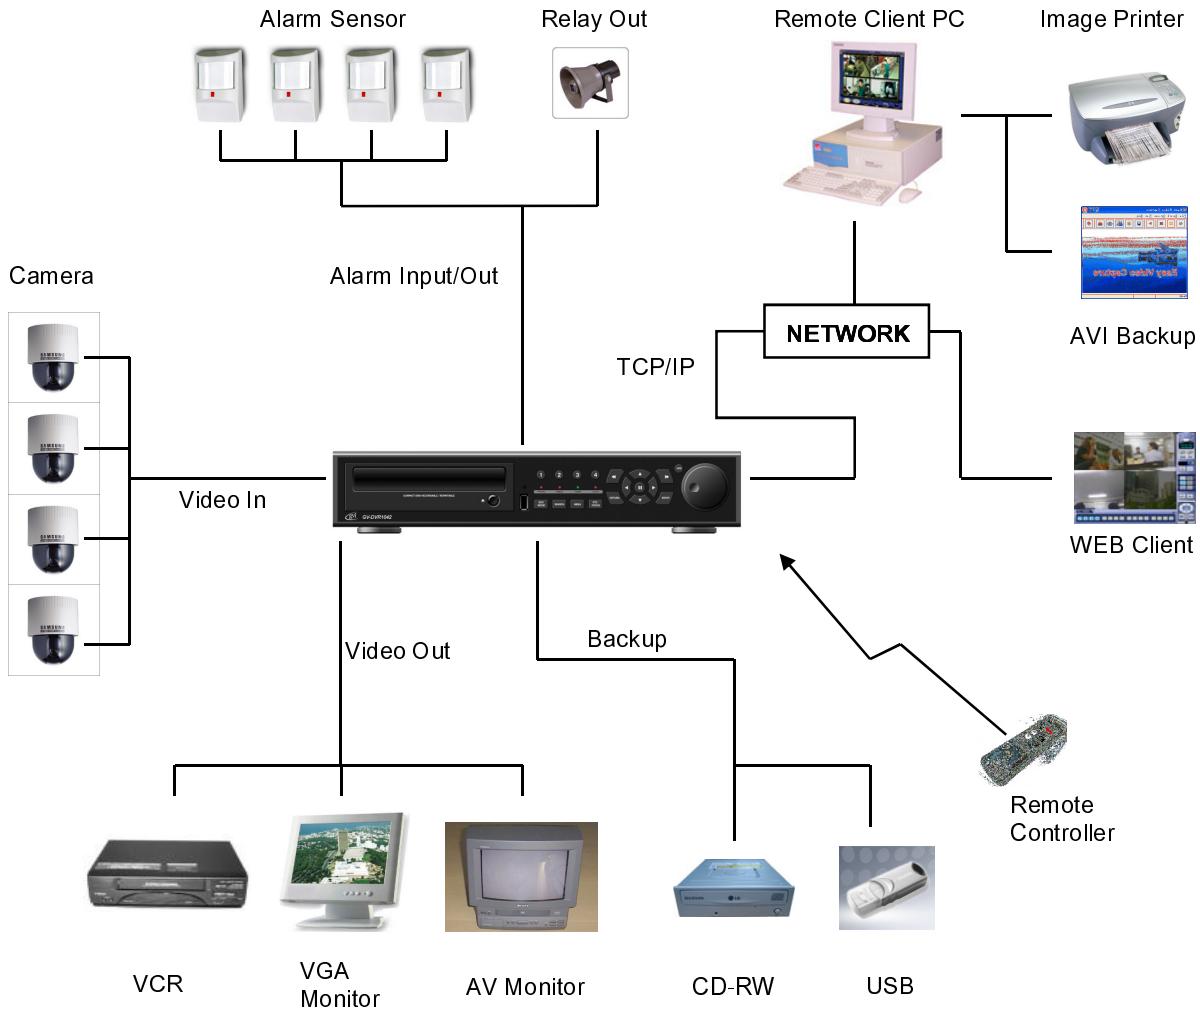

SYSTEM CONTENTS

① Basic Contents

Power Cable

12V Adaptor

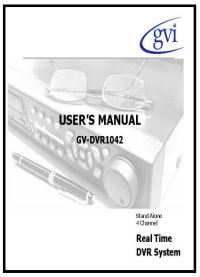

User's Manual

Remote Controller

Remote Client
Program Install CD

AAA Battery X 2

② Option Contents

HDD

CD-RW

USB Memory

SYSTEM CONFIGURE

1. Front panel description.

SHUTTLE WHEEL
Used to quickly adjust playback speed and direction. Also used to control camera zoom when in PTZ mode, and digital zoom level in live display

JOG RING
When playback is paused, used to move footage forwards or backwards, frame by frame

HOLD
Locks the current function of the SHUTTLE WHEEL so it can be released

CHANNEL SELECTION BUTTONS
Used to display individual channels in live display and Playback.
Also used to enter numeric passwords for the various login screens

CD-RW Media
Supports a CD-R, CD-RW, DVD for backup.

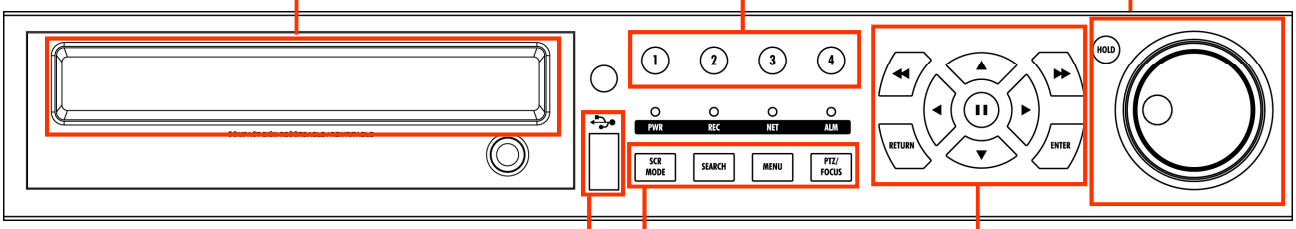

USB ports
Supports a wide variety of USB memory stick for archive, system setting backup and firmware upgrade.
Also support USB mouse for control

SCR MODE
Selects various display modes in live display

SEARCH
Displays the search menu

MENU
Displays the setup menus

PTZ
Selects PTZ mode in live display

CURSOR KEYS, ENTER and RETURN buttons
Used for navigating setup menus, search and archive screens.
Also used when the DVR is in PTZ mode

- ◂◂ Increases reverse playback speed
- ◂ Selects reverse playback
- ❚❚ Pauses / resumes playback
- ▸ Selects forward playback and also accesses the instant playback feature
- ▸▸ Increases forward playback speed

2. Rear panel description.

COMPOSITE MONITOR CONNECTIONS
Both outputs can be used at the same time if more than one main monitor connection is required

VGA & S-VIDEO
VGA main monitor connection to a PC monitor or plasma screen. Can be used simultaneously with the COMPOSITE and S-VIDEO main monitor connections

ALARM INPUTS & OUTPUTS
Up to 4 alarm inputs and outputs can be connected and configured as high or low inputs with common ground

CAMERA INPUTS and LOOP OUTPUTS
Connect up to 4 camera inputs.

Loop outputs can be used for connection to other equipment

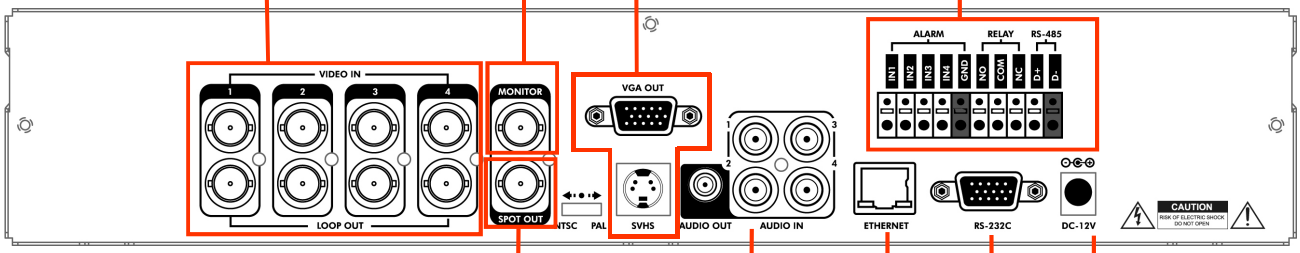

SPOT MONITOR OUTPUTS
1 spot monitors can be connected as necessary

AUDIO INPUTS & OUTPUTS
Up to 4 audio inputs and one audio output can be connected as necessary

SERIAL PORT
SERIAL port for connecting external RS-232 devices

LAN
LAN connection to a router or internal network

POWER INPUT
DC-12V power input port

SYSTEM CONFIGURE – Remote Controller

3. Remote Controller description.

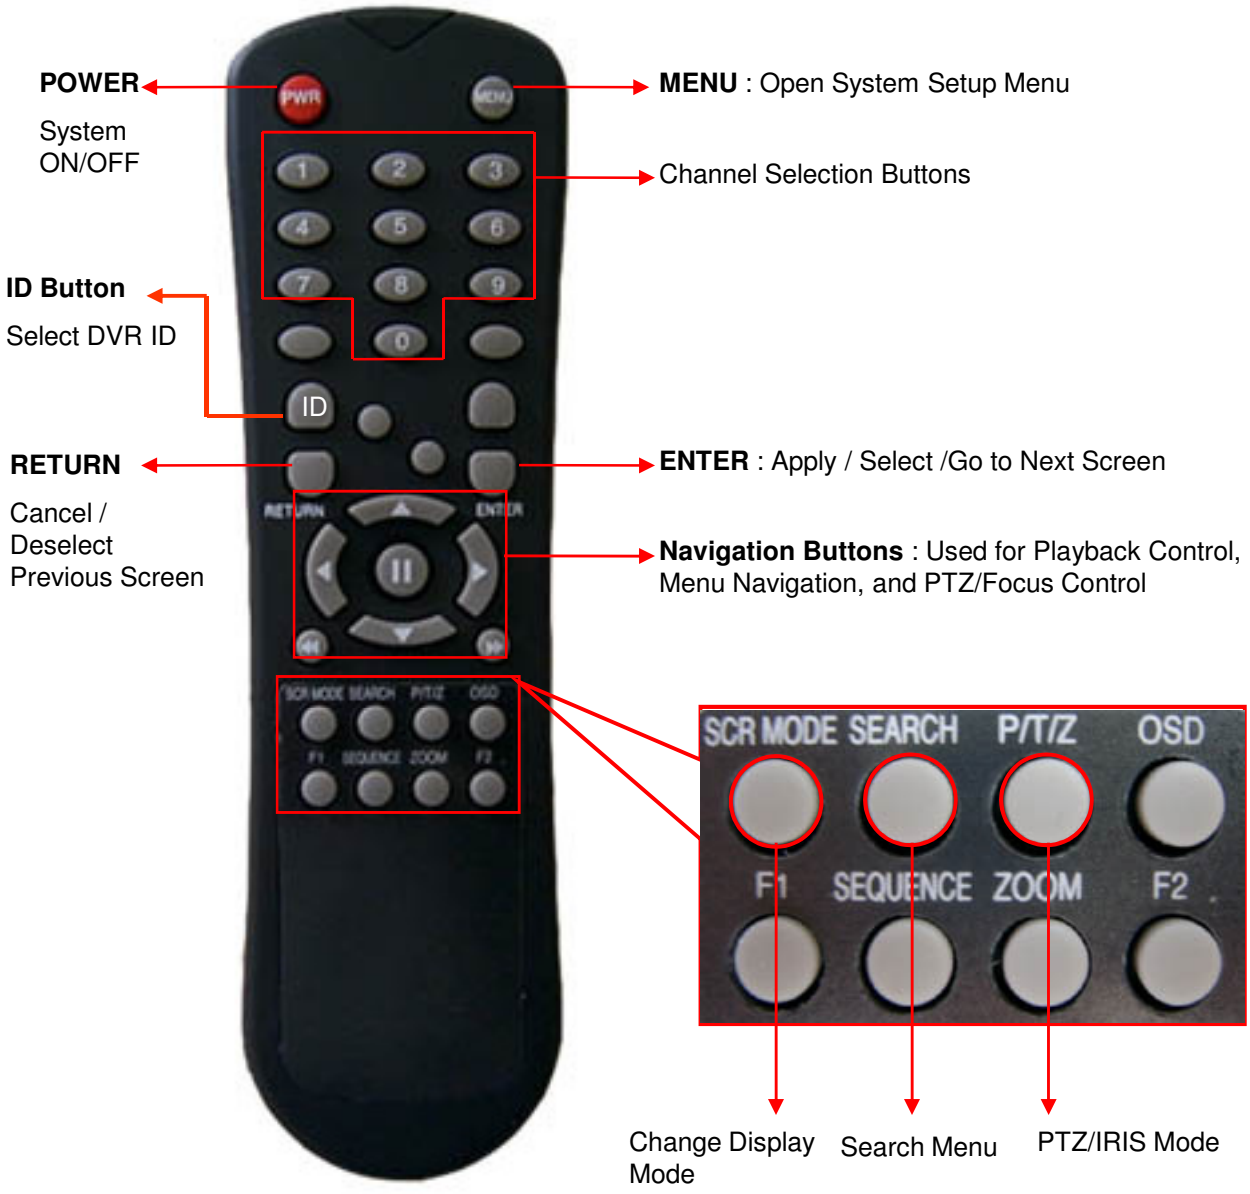

※ If there are many DVRs on stack, each DVR must be set different ID then Remote controller set each ID on DVR. Can control all DVRs on one Remote controller by each ID.

How to set ID on the remote controller

: Press the **ID** button then displayed **INPUT ID** statement.

Press the set ID and Press the **RETURN** button (The default ID is 01). For DVR ID, see the page46.
For returning to the original situation, press the **ID** button again.
And Input the **255** and press the **RETURN** button of remote controller.

CONNECT & POWER ON

- Connect up to 4 **CAMERA INPUTS** as necessary.
  The DVR also has **LOOP OUTPUTS** so that any signals can be fed to other equipment if required.
  Termination is automatically set by the DVR depending on connection type.
- Connect one or more monitors to the DVR using the **COMPOSITE, VGA or S-VIDEO** connections
- Connect power to the DVR. The DVR checks for proper power connection and emits two beeps.
  Press **ANY BUTTON** on the front panel of the DVR to begin operation.

Checking Hard Disk Drives ...
Disk0 HDD [HDS728080PLAT20]
Total 1 HDD Found.
System Disk Is Detected.
File System Recovery Completed.

The DVR startup screen detects and checks the status of hard drives and the CDRW / DVR-RW drive.

After startup diagnostics are complete, the operator must logon to the system. The default user name is 'ADMIN'.

Using the **CHANNEL SELECTION** buttons, key in the default password of '1234' and press the **ENTER** button.

Double click on the Password tap then the Virtual Keyboard will be appeared. Then click the password and click the ↵ button.

The DVR begins normal operation and shows the default display of 4 channels.

The status bar at the bottom of the screen shows current time and date and percentage of hard drive used.

A title for each channel is shown.

The red square and letter 'C' in the top right of each channel display shows that the channel is recording in Continuous / Motion Record Schedule mode.

LIVE DISPLAY

SEQUENCE

Click the right mouse button on the Live Display screen and Click the **SEQUENCE** menu.

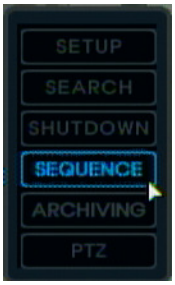

Press the **SEQ** button. Each channel is shown in full screen for a set period of time (default 3 sec) before switching to the next channel.

To stop the sequence on a particular channel, press the **SEQ** button again.

PTZ Camera Control

Click the right mouse button on the Live Display screen and Click the **PTZ** menu.

Speed domes and other telemetry devices connected to the DVR, can be fully controlled from the front panel.

In live display mode, press the **PTZ** button. To select a camera to control, use the **CHANNEL SELECTION** buttons.

Pan and tilt movement is controlled by the **CURSOR KEYS**, zoom is controlled by turning the **SHUTTLE WHEEL**.

LIVE DISPLAY

PTZ Camera Control continued

Click the **SWING** menu.

◂ & ▸ controls focus, ▲ & ▼ controls the iris.

Press **DISPLAY** or **SEQ** buttons to decrease or increase the swing number.

Press **PAUSE** to program the preset, or **ENTER** to call an existing swing.

Press **RETURN** to exit PTZ mode and return to live view.

SYSTEM SETUP

Click the right mouse button on the Live Display screen and Click the **SETUP** menu.

Double click on the Password tap then the Virtual Keyboard will be appeared. Then click the password and click the ↵ button.

Press the **SETUP** button to bring up the menu login screen.
Only operators with ADMIN rights can configure the DVR. Enter the default password of '1234'.

Click the **DISPLAY** menu.

To navigate around any items in the setup menu, use the **CURSOR KEYS** and the **ENTER** and **RETURN** buttons. In general, the **ENTER** button is used to select and change a particular item and the **RETURN** button is used to cancel a change or exit from a particular setup screen.

To setup all main system functions, highlight SYSTEM SETUP and press **ENTER**.

SYSTEM SETUP

DISPLAY

: To setup the various display options, highlight DISPLAY and press **ENTER**.

DISPLAY - OSD

Click the **OSD** menu and click the ON/OFF menu.

Then click the button for ON/OFF.

STATUS BAR : Turns the status bar at the bottom of the live display ON or OFF.

CAMERA TITLE : Determines whether the camera title is displayed.

EVENT ICON : Determines whether the DVR recording status is shown at the top right of each channel display window.

BORDER : Determines whether there is a border around each channel in multi screen display mode.

BORDER COLOUR : If the border is ON, the operator can choose the color.

MENU TRANSPARENCY : During menu setup, the live view can be seen behind the menu screen.

Changing this value determines whether the live view is more (higher value) or less (lower value) visible.

To change any of these settings, highlight OSD and press **ENTER** to select. Use the **CURSOR KEYS** to navigate to the option required. Press **ENTER** to select the option (the cursor changes to Blue) and use the **CURSOR KEYS** to change the setting. Press **ENTER** to save the setting or **RETURN** to cancel.

SYSTEM SETUP

DISPLAY : MONITOR

Click the **MONITOR** menu and click the ON/OFF menu.

Then click the button for ON/OFF.

SEQUENCE DWELL : The time that each screen is displayed in a sequence operation.

SPOT-OUT DWELL : The time that each screen is displayed on the spot monitor outputs.

DE-INTERLACE MODE : When recording any channels in D1 resolution (704 x 576) this should be set to ON to prevent judder during playback.

ALARM POP-UP MODE : When set to ON, an alarm input will cause the associated channel to display full screen.

ALARM POP-UP DWELL : Determines how long the full screen popup is displayed after an alarm input. If the alarm condition continues, the popup screen is displayed constantly.

MOTION POP-UP MODE : When set to ON, motion detection will cause the associated channel to display full screen.

MOTION POP-UP DWELL : Determines how long the full screen popup is displayed after motion detection. If motion continues, the popup screen is displayed constantly.

To change any of these settings, highlight MONITOR and press **ENTER** to select.

Use the **CURSOR KEYS** to navigate to the option required. Press **ENTER** to select the option (the cursor changes to orange) and use the **CURSOR KEYS** to change the setting. Press **ENTER** to save the setting or **RETURN** to cancel.

RECORD

RECORD

Click the **RECORD** menu and **RECORDING OPERATIONS** menu.

To setup the recording behavior of the DVR, highlight RECORD MENU and press **ENTER**.

RECORD : RECORDING OPERATIONS

Click the **RECORDING OPERATION** menu and click the each value.

Then click the value by button to change.

SCHEDULE MODE : Either DAILY (one schedule will apply to every day of the week) or WEEKLY (each day of the week has its own schedule).

PRE EVENT RECORDING TIME : When the DVR is not in continuous recording mode, this setting determines the amount of footage that is always recorded before an event occurs. (motion detection, alarm input etc.)

POST EVENT RECORDING TIME : When the DVR is not in continuous recording mode, this setting determines the amount of footage that is always recorded after an event occurs. (motion detection, alarm input etc.)

RECORD MENU

RECORD : CONTINUOUS / MOTION RECORD SCHEDULE

Click the **CONTINUOUS / MOTION RECORD SCHEDULE** menu.

This setup screen allows the operator to configure scheduled and motion detection recording.

There are 2 sections:

PARAMETER : Recording settings for each channel can be defined across a 24 hour period, in blocks (for example between 09:00 and 18:00) or for each individual hour. Note that when SCHEDULE MODE is set to WEEKLY, each day of the week can also be selected.

SCHEDULE : This section determines at what times the DVR will record and whether it is continuous recording or motion detection.

PARAMETER

Click the **PARAMETER** menu.

To change PARAMETER settings, highlight TIMER/MOTION SETUP and press **ENTER**.

Ensure PARAMETER is highlighted in blue and press **ENTER** again.

The 24 hour time bar is highlighted in purple.

RECORD MENU

PARAMETER continued

Click the **TIMEBAR** that user want.

Press **ENTER** to display the blue cursor.

The blue cursor shown represents one hour. (in this case between 00:00 and 01:00).

The table below the time bar shows the recording settings for this time period.

Drag the time that user want.

Example: To change the recording settings between 09:00 and 18:00.

Use the **CURSOR KEYS** to move the green cursor to the 09:00 position and press **ENTER**.

The cursor changes to orange to show the start position.

Use the **CURSOR KEYS** to stretch the orange cursor across to the 18:00 position.

RECORD MENU

PARAMETER continued

Click the SIZE, FPS, QUALITY and AUDIO value.

Then click the value by button to change.

Press **ENTER**. Recording settings for the selected time period are displayed.

SIZE : Recording resolutions of 352x288, 704x288 or 704x576 can be selected for each channel.

FPS : Frame rates between 1 and 25 can be set for each channel.

QUALITY : Four different picture recording qualities can be set for each channel.

AUDIO : If audio devices are connected to the DVR, any audio channel can be assigned to any of the video channels.

During playback, when a particular channel is selected in full screen, the assigned audio channel will be played back at the same time.

Adjust values as desired, and select OK to finish and return to the parameter menu. Other time periods can be configured in the same manner.

Remember that if SCHEDULE MODE is set to WEEKLY, recording settings need to be changed for each day as well as for each particular time

The default settings for all channels is 352 x 288, 7FPS, HIGHEST quality

Note: The DVR supports a maximum recording rate across all channels of 112 frames per second at 352x288 resolution. As settings are adjusted, the 'frames available' at bottom left displays the number of available frames still remaining and must always be zero or higher. If, whilst changing recording settings, this figure becomes negative, recording resolutions and / or frame rates must be lowered to increase the 'frames available' value to zero or above.

RECORD MENU

SCHEDULE

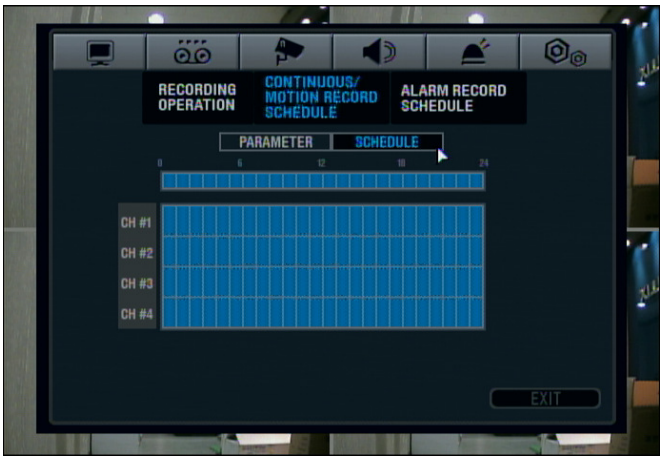

Click the **SCHEDULE** menu.

To change SCHEDULE settings, highlight TIMER/MOTION SETUP and press **ENTER**.

Use the **CURSOR KEYS** to highlight SCHEDULE and press **ENTER**.

The schedule box is highlighted in purple.

Click the Time and Channel.

Press **ENTER** to display the green cursor.

Example : To set all channels to motion detection recording only between 18:00 and 00:00.

Use the **CURSOR KEYS** to move the green cursor to the 18:00 position and press **ENTER**.

The cursor changes to orange to show the start position.

RECORD MENU

SCHEDULE continued

Drag the Time and Channel by left mouse.

Use the **CURSOR KEYS** to stretch the orange cursor across and down to select all channels between 18:00 and 00:00.

After drag, click the Motion.

Press **ENTER**, highlight MOTION and press **ENTER** again.

RECORD MENU

SCHEDULE continued

The selected area now displays the symbol for motion recording (half light blue block).

Repeat the above procedure to set different recording schedules for individual channels and time periods.

The schedule screen has 3 symbols to show the different recording modes.

Dark blue blocks: No scheduled or motion recording.

Light blue blocks: The DVR will record continuously.

Half light blue block: The DVR will only record when motion is detected.

RECORD MENU

RECORD : ALARM REOCRD SCHEDULE

Click the **ALARM RECORD SCHEDULE** menu.

The setting is same as CONTINUOUS / MOTION RECORD SCHEDULE.

This setup screen allows the operator to configure alarm input activated recording.

PARAMETER : Recording settings for each channel can be defined across a 24 hour period, in blocks (for example between 09:00 and 18:00) or for each individual hour.

Note that when SCHEDULE MODE is set to WEEKLY, each day of the week can also be selected.

SCHEDULE : This section determines at what times the DVR will monitor the alarm inputs and activate recording.

Please refer to Continuous / Motion Record Schedule on page 20 for details on setting up PARAMETER and SCHEDULE.

Alarm activated recording can be used in conjunction with Continuous / Motion Record Schedule.

For example, the DVR could be configured to record continuously at a low frame rate (set in Continues / Motion Record Schedule) and then increase to a higher frame rate during an alarm input (set in Alarm Record Schedule)

SYSTEM SETUP

CAMERA

Click the **CAMERA** menu.

To setup the various camera options, highlight CAMERA and press **ENTER**.

CAMERA : CAMERA TITLE

Click the **CAMERA TITLE** menu and click the ON/OFF menu on the COVERT menu.
Then click the button for ON/OFF.

Click the CAM No on the TITLE menu and change the camera name.

COVERT: When set to ON, the camera image is not displayed in live display but continues to be recorded.

TITLE: For each camera, a title of up to 11 characters can be set using the virtual keyboard.

SYSTEM SETUP

DISPLAY : PTZ SETUP

Click the **PTZ SETUP** menu and click the each value on the ADDRESS, PROTOCOL and BAUD RATE menu.

Change the value by button.

ADDRESS: The unique ID of the PTZ device.

PROTOCOL: The protocol of the PTZ device.

BAUD RATE: The baud rate of the PTZ device.

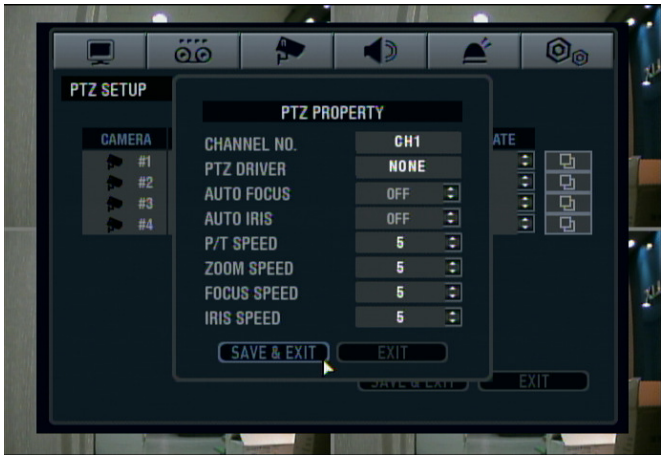

Click the button and change the detail value by button.

PTZ properties can also be adjusted for each channel by selecting the icon and pressing ENTER.

Note that some settings, such as AUTO FOCUS, may not be compatible with particular PTZ equipment.

If this is the case, changing this value will have no effect on PTZ control.

SYSTEM SETUP

DISPLAY : COLOR SETUP

Click the **COLOR SETUP** menu and click the value on the BRIGHTNESS, CONTRAST, TINT and COLOR menu.

Brightness, contrast, tint and color can be adjusted for each individual channel.

Highlight which channel to modify and press **ENTER**.

DISPLAY : COLOR SETUP continued

Click the each value by button.

The selected channel is displayed in full screen.

BRIGHTNESS, CONTRAST, TINT and COLOUR can be changed as necessary.

To modify a different channel, highlight CAMERA and choose the desired channel.

Press **RETURN** when all changes are complete.

SYSTEM SETUP

DISPLAY : MOTION SENSOR

Click the **MOTION SENSOR** menu and click the value on the SENSITIVITY menu.

Change the value by button.

SENSITIVITY : Between 1 (Lowest) and 10 (Highest) and determines the degree of motion required before recording is activated.

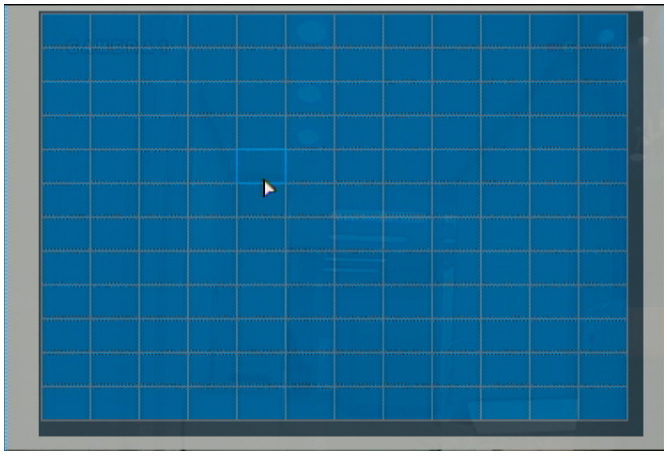

Click the button.

AREA SETUP : Choosing this option allows the operator to define which areas of the image are monitored for motion detection.

Light blue grid squares represent detection areas, grey grid squares are ignored.

The area on the right shows that motion will be detected across the entire image.

DISPLAY : MOTION SENSOR continued

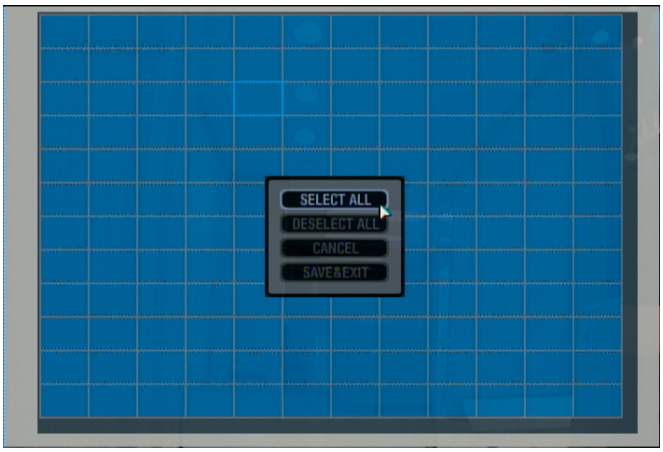

To quick select or deselect the entire grid, click the right mouse button and click the **SELECT ALL** or **DESELECT ALL** menu.

To quickly select or deselect the entire grid, press **RETURN** to bring up the motion menu.

Highlight SELECT ALL or DESELECT ALL as appropriate and press **ENTER**.

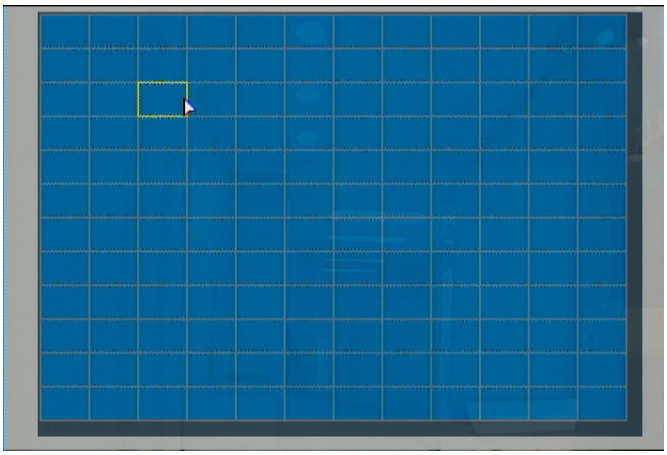

Drag the grid by the left mouse.

To select or deselect specific areas, press **ENTER** to bring up the green cursor square in the top left of the display.

Move the cursor using the **CURSOR KEYS** to the first corner of the area to be set and press **ENTER** – the cursor turns orange.

DISPLAY : MOTION SENSOR continued

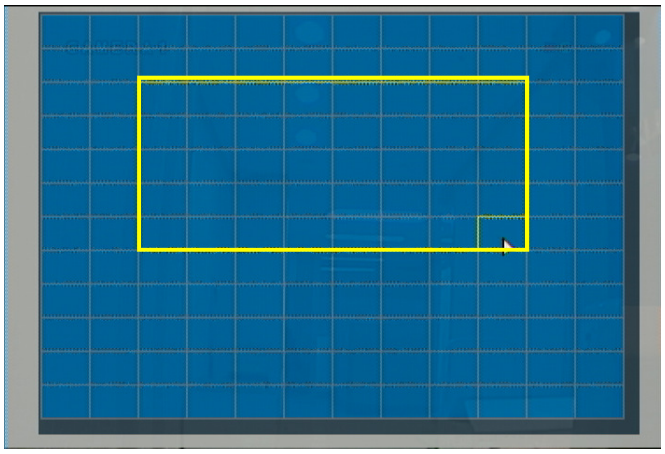

Use the **CURSOR KEYS** to increase the size of the motion cursor as required.

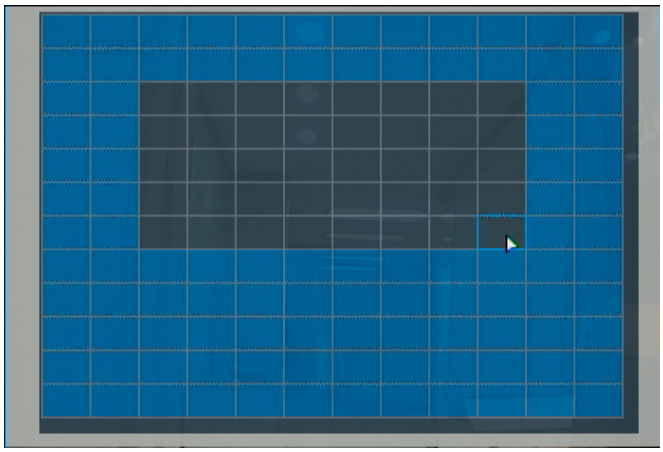

Press **ENTER** to change from selected to deselected (or vice versa). Repeat the above sequence as necessary to mask off or include other areas of the image.

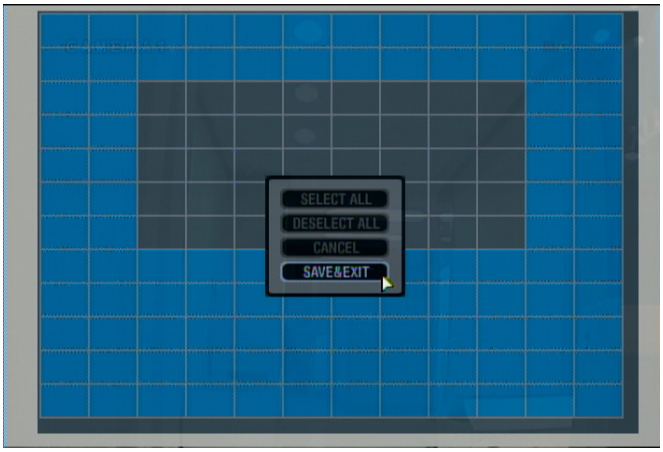

Click the right mouse button and select the SAVE & EXIT menu.

Once the detection area has been defined, press **RETURN** and choose SAVE & EXIT to save the area and return to the motion setup menu.

Please note
: a motion record schedule must be defined in the RECORD MENU described on page 20.

SYSTEM SETUP

SOUND

Click the **SOUND** menu.

To setup the various sound options, highlight SOUND and press **ENTER**.

SOUND : AUDIO

Click the **AUDIO** menu and click the ON/OFF menu.

Then click the button for ON/OFF.

LIVE AUDIO : When set to ON, the selected audio channel can be monitored on the AUDIO OUTPUT.

AUDIO MONITORING CHANNEL : Specify which one of the 4 AUDIO INPUTS is routed to the AUDIO OUTPUT.

NETWORK AUDIO TX : When set to ON, live and playback audio is transmitted to a remote PC connection.

NETWORK AUDIO RX : When set to ON, allows a remote PC connection to send audio back to the DVR.

SYSTEM SETUP

SOUND : BUZZER

Click the **BUZZER** menu and click the ON/OFF menu.

Then click the button for ON/OFF.

KEYPAD: When set to ON, each front panel button press is confirmed by a beep.

IR REMOTE: When set to ON, each command received from the IR remote is confirmed by a beep.

EVENT / SENSOR

Click the **SYSTEM** menu.

To setup the various system options, highlight SYSTEM and press **ENTER**.

SYSTEM SETUP

EVENT / SENSOR : HDD EVENT

Click the **HDD EVENT** menu and click the DRIVE, SMART ALARM and CHECK INTERVAL value.

Then click the value by button to change .

The DVR can monitor the hard drives and detect problems that may be developing.

DRIVE : Selects which hard drive to configure for monitoring.

SMART ALARM : Enables SMART disk monitoring.

CHECK INTERVAL : Can be adjusted as desired.

EVENT / SENSOR : ALARM INPUT

Click the **ALARM INPUT** menu and click the OPERATION and TYPE value.

Then click the value by button to change.

Determines the behavior of each of the 4 alarm inputs.

OPERATION : Alarm inputs can be enabled or disabled.

TYPE : Alarm inputs can be set as normally open or normally closed.

SYSTEM SETUP

EVENT / SENSOR : ALARM OUTPUT

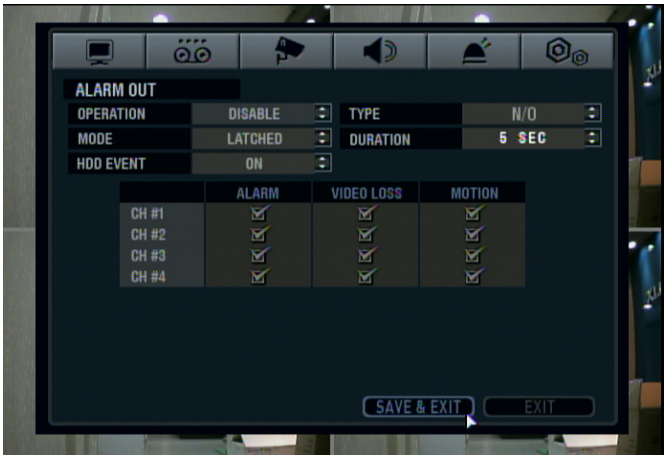

Click the **ALARM OUTPUT** menu and click the each value.

Then click the value by button to change.

Determines the behavior and actions that will trigger each of the 4 alarm outputs.

Behavior settings

OPERATION : The selected alarm output can be enabled or disabled.

MODE : Can be either TRANSPARENT (the output is active only when the trigger criteria is present) or LATCHED (the output is active for a set period of time after a trigger).

HDD EVENT : Determines whether a hard drive event triggers the alarm output.

TYPE : Can be set to high (0V to +5V when activated) or low (+5V to 0V when activated).

DURATION : In LATCHED mode, the time that the alarm output remains active after it has been triggered.

Action settings

ALARM : Determines whether alarm inputs will trigger the alarm output.

VIDEO LOSS : Determines whether video loss on any of the selected channels will trigger the alarm output.

MOTION : Determines whether motion detection on any of the selected channels will trigger the alarm output.

Remember to select APPLY and press ENTER to save all settings before exiting these menus

SYSTEM SETUP

EVENT / SENSOR : BUZZER OUT

Click the **BUZZER OUTPUT** menu and click the each value.

Then click the value by button to change.

Determines the behavior and actions that will trigger the internal buzzer.

Behavior settings

OPERATION : The internal buzzer can be enabled or disabled.

HDD EVENT : Determines whether a hard drive event sounds the buzzer.

MODE : Can be either TRANSPARENT (the buzzer sounds only when the trigger criteria is present) or LATCHED (the buzzer sounds for a set period of time after the trigger).

DURATION : In LATCHED mode, the time that the buzzer sounds after it has been triggered.

Action settings

ALARM : Determines whether alarm inputs will sound the buzzer.

VIDEO LOSS : Determines whether video loss on any of the selected channels will sound the buzzer.

MOTION : Determines whether motion detection on any of the selected channels will sound the buzzer.

Remember to select APPLY and press ENTER to save all settings before exiting these menus

EVENT / SENSOR : EMAIL NOTIFICATION

Click the **EMAIL NOTIFICATION** menu and click the each value.

Then check the usage by click.

Determines the behavior and actions that will send an email to a remote user.

Behavior settings

NOTIFICATION : Email notification can be turned ON or OFF.

HDD EVENT : Determines whether a hard drive event sends an email.

Action settings

ALARM : Determines whether alarm inputs will send an email.

VIDEO LOSS : Determines whether video loss on any of the selected channels will send an email.

MOTION : Determines whether motion detection on any of the selected channels will send an email.

Email settings must also be configured in MAIL and USER MANAGEMENT settings described on page 42.

SYSTEM SETUP

SYSTEM

Click the **SYSTEM** menu.

To setup the various system options, highlight SYSTEM and press **ENTER**.

SYSTEM : DATE / TIME

Click the **DATE** / **TIME** menu and click the ON/OFF menu.

Then click the button for ON/OFF.

DATE TIME : Allows the operator to set or modify the current date & time.

DATE FORMAT : Determines how the date is displayed.

TIME FORMAT : Determines how the time is displayed.

NETWORK TIME SERVER SETUP

: If the DVR is connected to the Internet, the time and date can be accurately set by selecting SYNC and pressing **ENTER**.

TIME ZONE SETUP : should be set according to the region that the DVR is used in.

D.S.T. : When set to ON, the DVR will automatically adjust the time by one hour on the relevant date in spring and autumn.

SYSTEM SETUP

SYSTEM : NETWORK

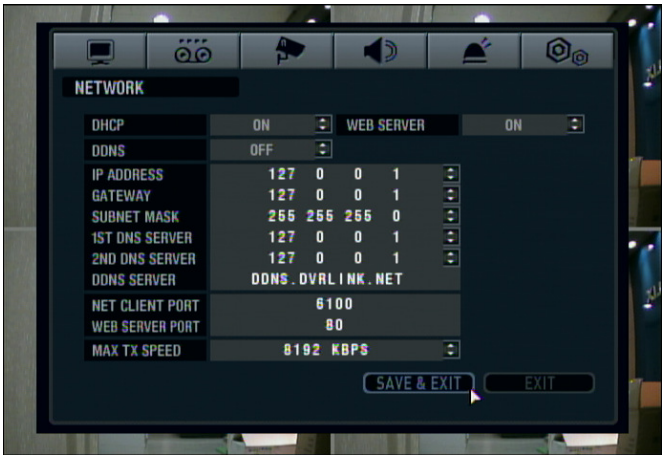

Click the **NETWORK** menu and click the ON/OFF menu.

Then click the button for ON/OFF.

DHCP : When enabled, the DVR will obtain an IP address automatically if connected to a DHCP server or router.

DDNS : When enabled, the DVR can be accessed through a Dynamic DNS server. Commonly used if a broadband connection does not have a static IP address.

WEB SERVICE : When enabled, allows remote connections using Internet Explorer or other web browsers.

IP ADDRESS : If DHCP is not being used, the IP address can be manually set.

GATEWAY : If DHCP is not being used, the gateway IP address can be manually set.

SUBNET MASK: If DHCP is not being used, the subnet mask can be manually set.

1ST DNS SERVER : If DHCP is not being used, the first DNS server can be manually set.

2ND DNS SERVER : If DHCP is not being used, the second DNS server can be manually set.

DDNS SERVER : If DDNS is enabled, the host DDNS server is specified here.

NET CLIENT PORT : The port number that the DVR uses to support remote connection from the client software.

WEB SERVER PORT : The port number that the DVR uses to support remote connection from Internet Explorer or other web browsers.

MAX TX SPEED : Specifies the maximum bandwidth that the DVR can use during a remote connection.

Please note: If any network settings are modified, the DVR will need to be restarted for changes to take effect

SYSTEM SETUP

SYSTEM : MAIL

Click the **MAIL** menu and click the ON/OFF menu.

Then click the button for ON/OFF.

SERVER : The SMTP outbound email server that should be used to send email notifications.

PORT : The outbound email port number.

SECURITY : Set to OFF if the SERVER does not require a username and password to connect.

USER : Enter a username to identify the DVR in email messages.

PASSWORD : If SECURITY is set to ON, enter the password here.

TEST E-MAIL : Can test E-mail function.

Please note : A USER must be entered for the mail function to operate correctly. The username must not contain spaces

SYSTEM : USER MANAGEMENT

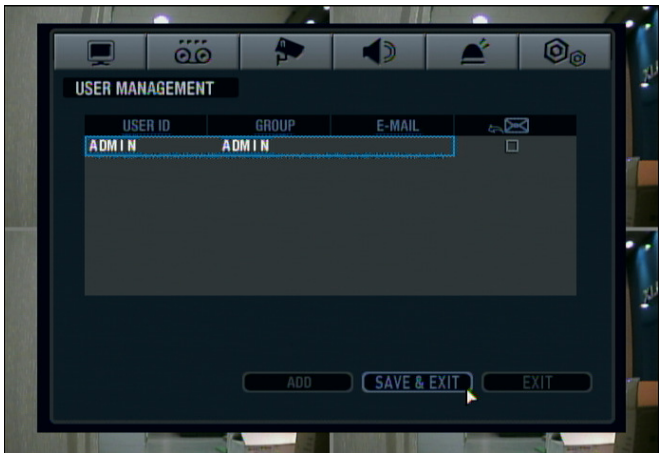

Click the **USER MANAGEMENT** menu and double click the **ADMIN** on the GROUP menu.

By default, the DVR is configured with a user ID of ADMIN, belonging to the ADMIN group and with a password of 1234.

As well as the ability to add new users, existing user details can be modified.

To modify user details, highlight the user with the green cursor and press **ENTER**.

SYSTEM SETUP

SYSTEM : USER MANAGEMENT continued

For edit, double click on the each tap.

After changing, click the button.

USER ID : Edit the user ID using the virtual keyboard.

PASSWORD : Change the password using the virtual keyboard.

NOTE: To delete the existing password use the ◂◂ key.

GROUP : Users can belong to one of three groups - ADMIN, MANAGER or USER.

E-MAIL : Enter the users email address if email notification is required.

E-MAIL NOTIFICATION : Enable or disable email notifications for this particular user.

Please note: For security reasons, it is recommended that the ADMIN user password is changed as soon as possible

SYSTEM SETUP

SYSTEM : USER MANAGEMENT continued

Click the **ADD** menu. Enter the USER ID and PASSWORD by double click.

After click the USER ID and PASSWORD, click button.

To add users, highlight ADD and press **ENTER**.
The new user details can be added using the steps outlined above.

More Information about user management

Up to seven individual users can be created, and each user can belong to one of three user groups.

USER : Members of this group can only adjust live view settings. Playback and DVR setup is not available.

MANAGER : Members of this group can adjust live view settings and playback recorded footage. (including covert cameras)

ADMIN : Members of this group have full control over the DVR including setup.

Please note : Any user can be deleted except the default ADMIN user

SYSTEM SETUP

SYSTEM : DISK MANAGEMENT

Click the **DISK MANAGEMENT** menu.

Click the RECORD TIME LIMIT & OVERWRITE and select ON/OFF value.

To manage the internal hard drives, highlight DISK MANAGE and press **ENTER**.

RECORD TIME LIMIT : In certain circumstances, it may be necessary to limit the amount of footage stored. on the DVR (to comply with data protection laws for example).

Recording can be limited to 12 hours, 1 day, 2 days, 3 days, 1 week or one month. Once the DVR has this amount of footage stored, it will start to overwrite the earliest recorded footage.

OVERWRITE : When set ON, the DVR will start overwriting the earliest recorded footage once the hard drive becomes full. In this case, the percentage of hard drive used shown in live display will always be 99%. When set to OFF, the DVR will stop recording when the disk becomes full.

FORMAT : If necessary, all footage can be erased from the DVR using this option.

Please note: When RECORD TIME LIMIT is set, the percentage of HDD used shown in live display mode may never reach 99%.

For example, if the total HDD capacity of the DVR allows for a recording time of

4 days under normal operation, if the RECORD TIME LIMIT is set to 2 days, the percentage of HDD used will never exceed 50%.

Please note: When a RECORD TIME LIMIT is set, the OVERWRITE option cannot be changed

SYSTEM SETUP

SYSTEM : SYSTEM MANAGEMENT continued

Click the **SYSTEM MANAGEMENT** menu.

And click the PRESS menu for FW Upgrade, Factory Default and System Data.

F/W version : Shows the firmware version of the DVR.

H/W version : Shows the hardware version of the DVR.

VIDEO SIGNAL TYPE : The DVR automatically switches between PAL and NTSC depending on the channel 1 input signal at power on.

DISK CAPACITY : The first value shows the amount of hard drive capacity used by recorded footage, the second value shows the total hard drive capacity installed.

IP ADDRESS : Shows either the manual IP address entered in NETWORK setup or the IP address assigned by a DHCP server if enabled.

MAC ADDRESS : Shows the MAC (Media Access Control) address of the DVR. It is unique – no other network device has this MAC address.

SYSTEM NAME : A system name of up to 10 characters can be defined. It is used so that notification emails can be identified.

F/W UPDATE : Firmware updates may be released periodically to enhance system performance and add extra features. The operator can upgrade the firmware using a USB memory stick.

FACTORY DEFAULT : If settings have been changed which cause erratic behavior, the factory default settings can be loaded.

SYSTEM DATA : System settings can be saved to a USB memory stick. The settings can be reloaded in case of accidental factory reset or can be transferred to another DVR if multiple units need to be installed with the same settings. All information is saved apart from network settings and system name.

SYSTEM SETUP

SYSTEM : CONTROL DEVICE

Click the **CONTROL DEVICE** menu.

And select the SYSTEM ID, PTZ Protocol and camera BAUD RATE.

This will allow up to 254 DVRs to be controlled from the same keyboard.

SYSTEM ID : If more than one DVR is connected on the same RS485 bus, each one must have a unique ID.

Note : If use more than one DVR on stack, each DVR must have unique ID for control by Remote controller.

PROTOCOL : Must be set by Control Device.

BAUD RATE : Must be set to match the baud rate of the PTZ controller.

SYSTEM : SHUTDOWN

Click the **SHUTDOWN** menu.

To shutdown, user should enter the ID and password.

SEARCH

SEARCH

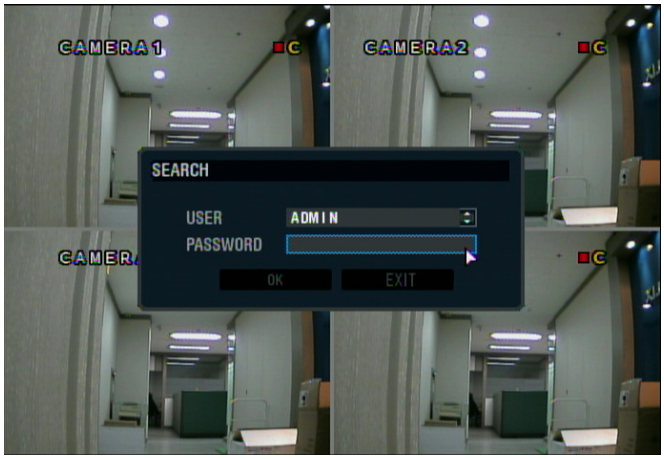

Click the right mouse button on the Live Display screen and Click the **SEARCH** menu.

Double click on the Password tap then the Virtual Keyboard will be appeared. Then click the password and click the ↵ button.

To search for a particular section of recorded footage, press the **SEARCH** button.

To protect unauthorized viewing of footage, only ADMIN and MANAGER user levels can playback footage.

To login as ADMIN, enter the default password of 1234 and press **ENTER**.

SEARCH : TIME SEARCH

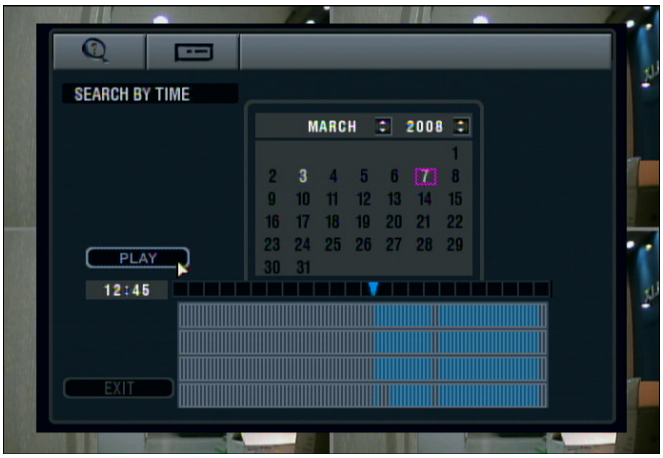

Click the date that user want.

The DVR uses a calendar and timeline search method for quick access to recorded footage.

The calendar displayed on the left shows the current month.

Days highlighted in green have recorded footage.

The timeline on the right shows a 24 hour status of all channels for the selected day. Light blue areas show recorded footage.

SEARCH

SEARCH : TIME SEARCH continued

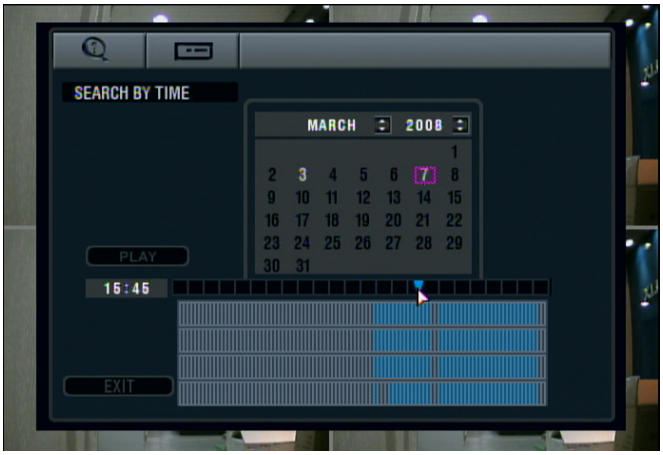

Drag the time bar by left mouse.

Press **ENTER** to select the calendar and use the **CURSOR KEYS** to move the purple square to the required day.

As different days are selected, the timeline display also changes to show recorded footage on that day.

Press **ENTER** to choose the day and move to the timeline.

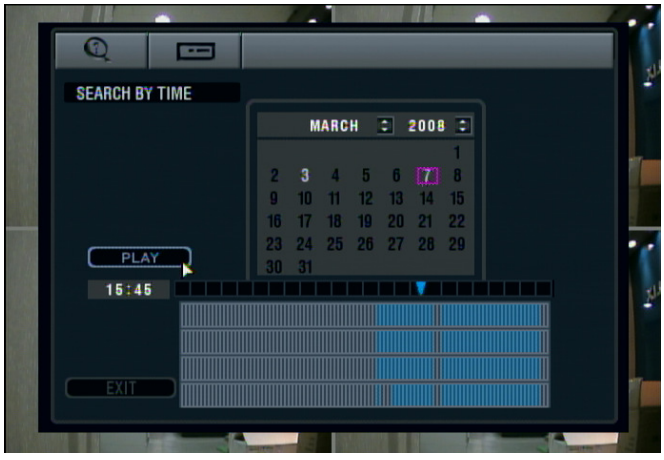

Click the **PLAY** menu.

Use the **CURSOR KEYS** to move the timeline cursor left or right to select the time segment required.

Each movement of the timeline cursor increases or decreases the time by 15 minutes.

The currently selected time is displayed above the calendar.

Press **ENTER** to begin playback from the selected time.

SEARCH

SEARCH : TIME SEARCH continued

The default playback mode is 4 screen display.

By pressing **DISPLAY** or using the **CHANNEL SELECTION** buttons, it is possible to display single screen or other multi screen formats in a similar way to the live display mode.

During playback, turning the **SHUTTLE WHEEL** steadily clockwise increases the playback speed by up to 64 times.

Turning steadily anticlockwise will reverse play by up to 64 times. When the **SHUTTLE WHEEL** is released, playback is paused.

If the **HOLD** button is pressed and released during **SHUTTLE WHEEL** operation, the last shuttle function is held, even if the wheel is released.

When playback is paused, the **JOG RING** can be used to accurately move the footage forward or backwards, frame by frame.

Playback speed and direction can also be controlled using the five playback buttons located under the jog wheel.

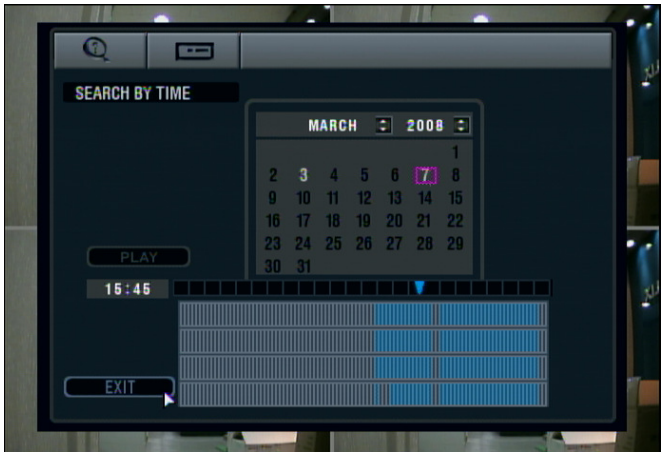

To exit playback mode and return to the search screen to choose another time and date, press **RETURN**.

To exit the search screen and go back to live view, repeatedly press **RETURN**.

SEARCH

SEARCH : EVENT SEARCH

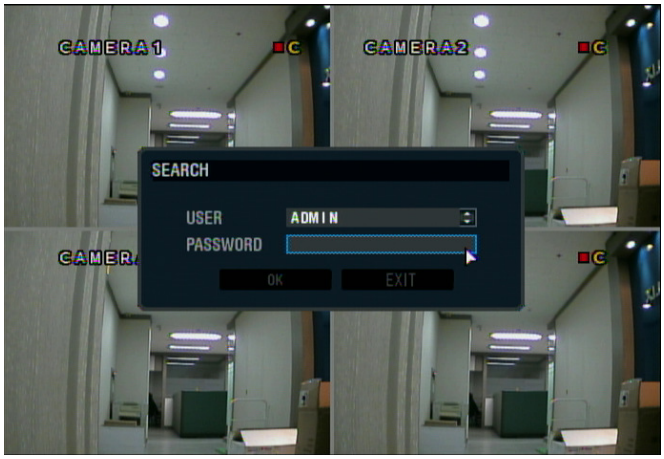

Click the right mouse button on the Live Display screen and Click the **SEARCH** menu.

Double click on the Password tap then the Virtual Keyboard will be appeared. Then click the password and click the button.

The DVR event log stores events such as motion and alarm activated recording, video loss etc.

To search for an event and playback the recorded footage, press the **SEARCH** button and log in as ADMIN with the default password of 1234.

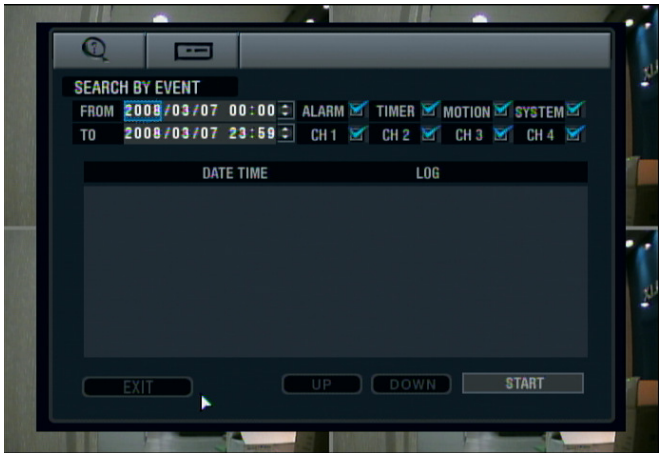

Click the **SEARCH BY EVENT** menu and each value.

Then click the value by button to change.

Click the **START** menu.

To display the event log screen, press the right **CURSOR KEY** to select SEARCH BY EVENT and press **ENTER**.

Various filters can be used to limit the number of events displayed. Using the **CURSOR KEYS** and **ENTER** button, select the FROM and TO date / time and the events and channels required.

SEARCH

SEARCH : EVENT SEARCH continued

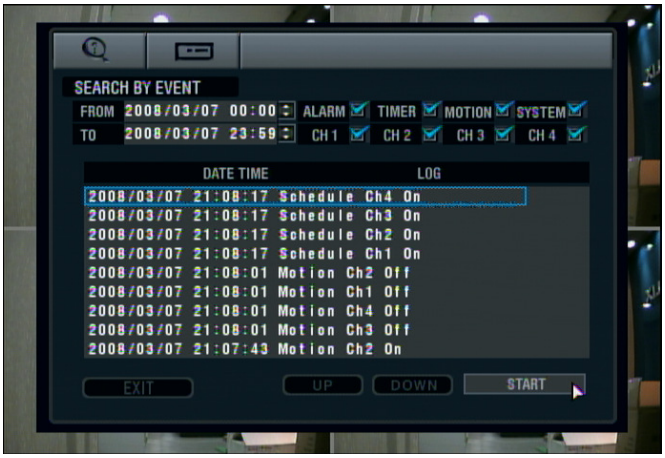

Click the **START** menu.

Highlight START and press **ENTER** to display the event log for the criteria selected.

To playback footage for a particular event, select the event from the list using the **CURSOR KEYS** and press **ENTER**.

Playback resumes from the moment the selected event occurred and continues until stopped by the operator.

During event search playback, the **SHUTTLE WHEEL**, **JOG RING** and playback buttons can be used as normal.

To stop playback and return to live view mode, repeatedly press **RETURN**.

Note: The event log search contains the following selectable entries:

ALARM: When ticked, all alarm input events are displayed for the chosen date range.

TIMER: When ticked, scheduled recording operations are displayed for the chosen date range.

MOTION: When ticked, all motion detection events are displayed for the chosen date range.

ETC: When ticked, all other events (Video loss, remote connection etc.) are displayed for the chosen date range.

ARCHIVING

ARCHIVING

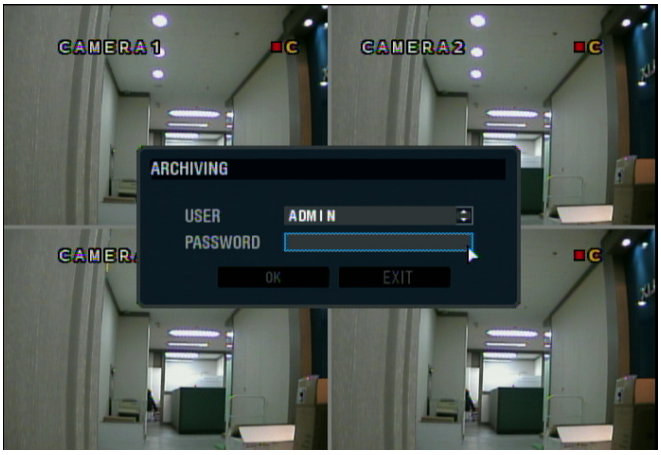

Click the right mouse button on the Live Display screen and Click the **ARCHIVING** menu.

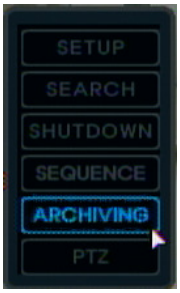

Double click on the Password tap then the Virtual Keyboard will be appeared. Then click the password and click the button.

To archive recorded footage to USB memory stick or CD, press the **ARCHIVE** button.

To protect unauthorized viewing and distribution of footage, only the ADMIN user level can archive footage.

To login as ADMIN, enter the default password of 1234 and press **ENTER**.

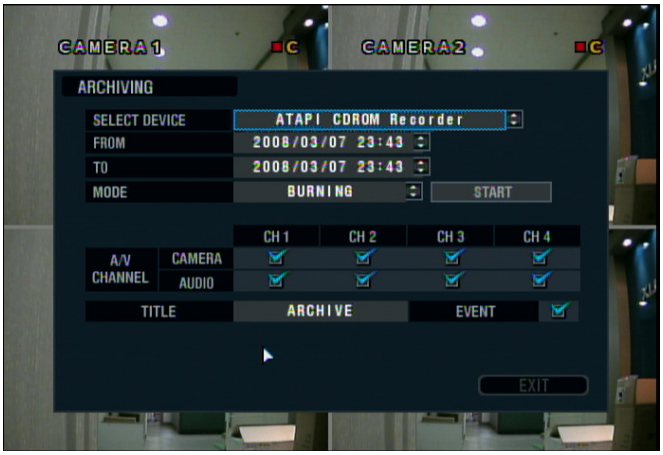

Click the each value.

Then click the value by button to change.

Click the **START** menu.

The Archiving screen allows the operator to choose exactly what to backup and to where.

Use the **CURSOR KEYS** to navigate around the Archiving screen. To change any value or setting:

Press **ENTER** to change the green cursor to orange.

Use the up and down **CURSOR KEYS** to change the value.

Press **ENTER** to accept the value or RETURN to cancel.

To change a tick box setting, press ENTER to toggle on or off.

ARCHIVING

ARCHIVING continued

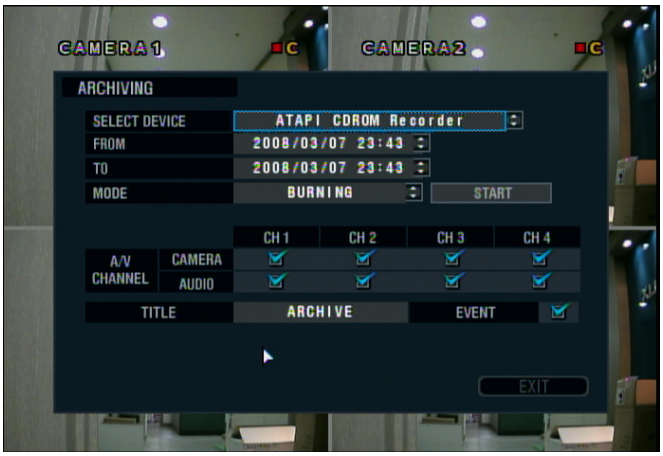

SELECT DEVICE: Choose between CDR or USB.

FROM / **TO**: Start and end time to backup.

MODE: 'Backup only' or 'Erase and backup'

A/V CHANNEL
: Video and audio for any channel can be included or excluded from the backup.

TITLE: The name of the archive set.

EVENT: When selected, the event log for the particular archive time period is included.

Please note: If using a USB memory stick, it must be inserted before selecting the archiving menu

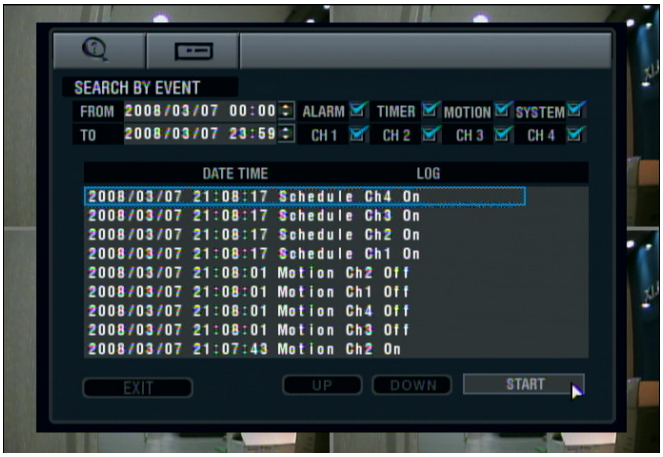

Click the **OK** menu.

Once all the desired archive options have been selected, highlight the START button and press **ENTER**. The DVR displays a list showing the exact information to be archived and the total archive size.

If the ORIGINAL SIZE is larger than the available space on the backup media, the END TIME of the archive set is reduced accordingly.

The MODIFIED SIZE is the final file size of the archive set.
Select OK and press **ENTER** to begin the archive process.

ARCHIVING

ARCHIVING continued

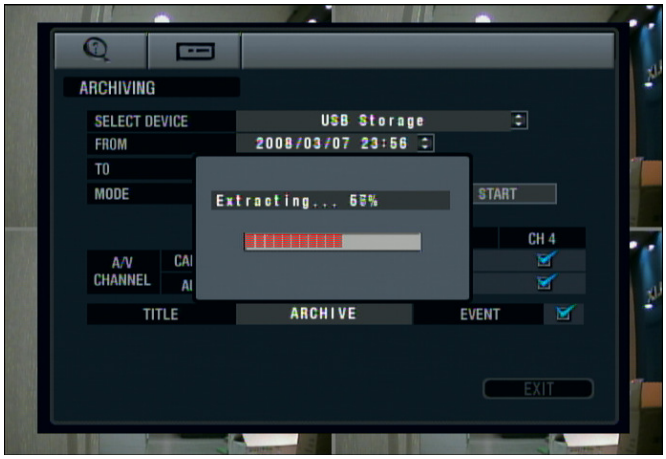

The footage is extracted to a temporary area on the hard drive.

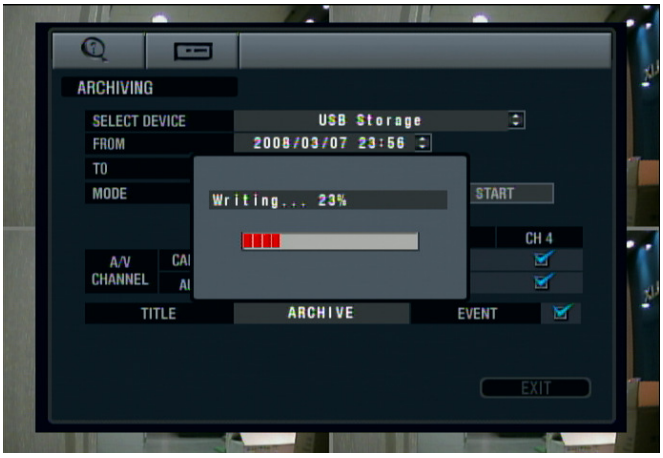

Once extracted, the footage is copied to CD or USB.

Note that depending on the amount of footage selected for archive, the extracting and burning process may take some time, during which the DVR cannot be used.

Normal recording is unaffected by the archive process.

REMOTE CLIENT SETUP

The DVR is supplied with software to allow remote connections either on a direct LAN connection or over the Internet.

The remote client allows full live viewing of the DVR including control of PTZ cameras.

In addition, playback, remote setup, audio talkback, local backup and remote alarm triggering can all be achieved.

Client Software Installation

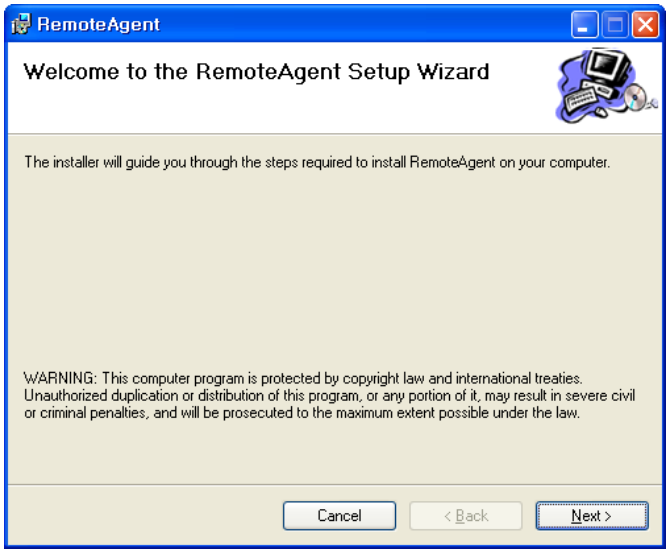
RemoteAgent
Welcome to the RemoteAgent Setup Wizard
The installer will guide you through the steps required to install RemoteAgent on your computer.
WARNING: This computer program is protected by copyright law and international treaties. Unauthorized duplication or distribution of this program, or any portion of it, may result in severe civil or criminal penalties, and will be prosecuted to the maximum extent possible under the law.
Cancel
< Back
Next >

Insert the CD supplied with the DVR into your PC's CD-ROM drive. The install process will begin automatically and display the following screen.

Click 'Next>' to continue.

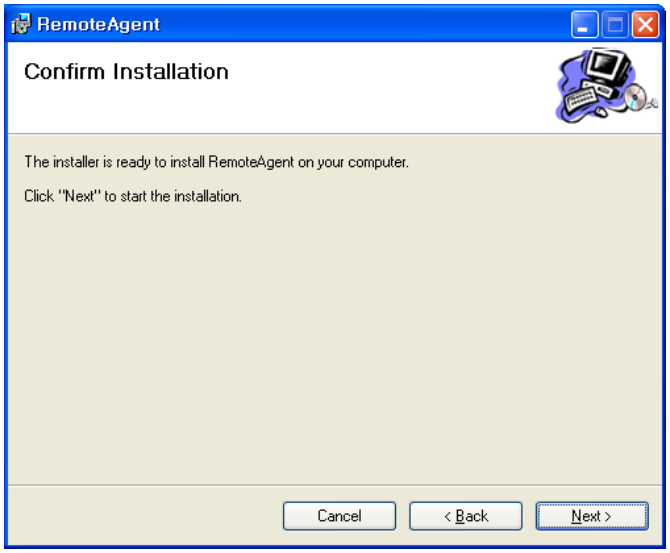
RemoteAgent
Confirm Installation
The installer is ready to install RemoteAgent on your computer.
Click "Next" to start the installation.
Cancel
< Back
Next >

Click 'Next>' to begin installation.

REMOTE CLIENT SETUP

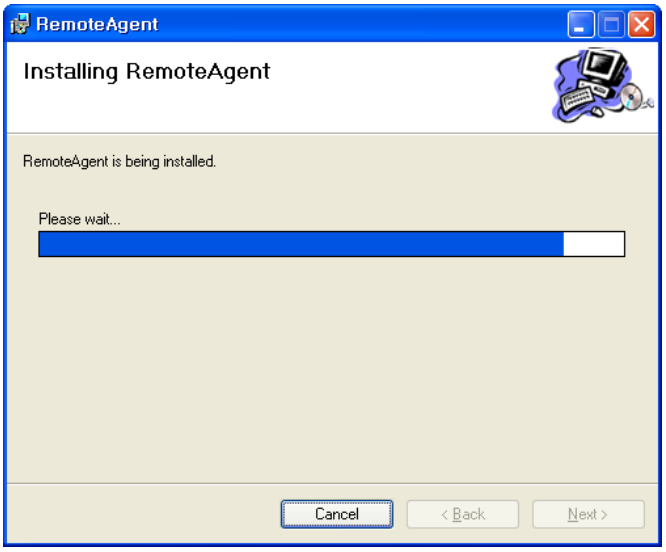

The DVR remote client software is installed.

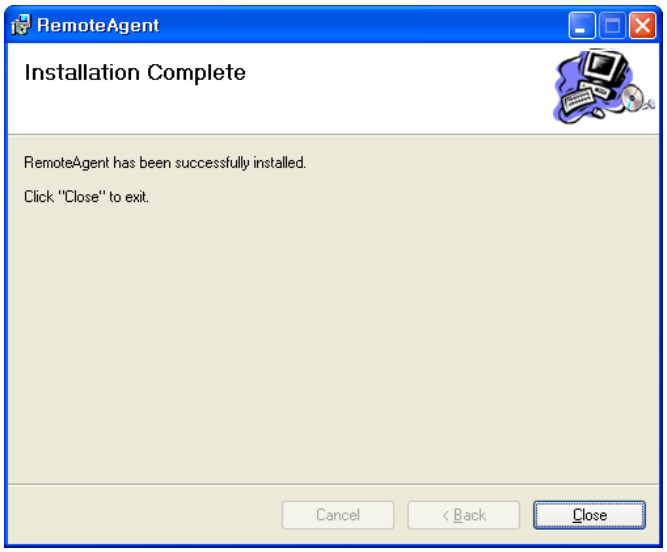

A final install screen is displayed confirming that installation is successful.

Two icons are created on the PC desktop.

'Remote Agent' is the main software package.
'BackupPlayer' is the software to view archive footage from the DVR.

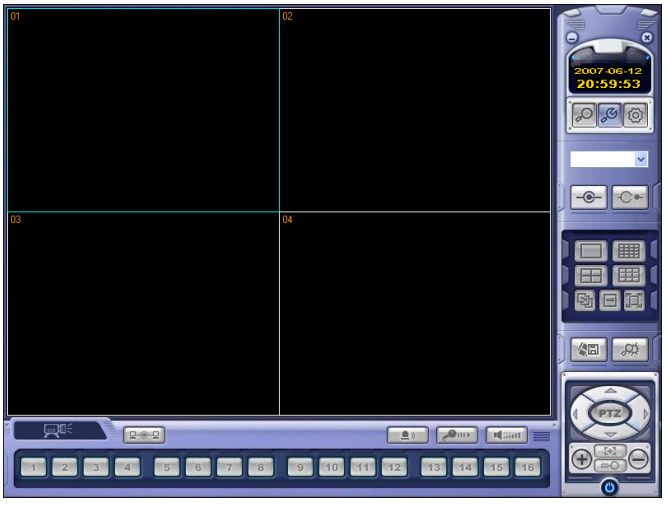

To begin using the remote client software, double click the icon on the desktop or click:

Start – Programs –RemoteAgent – DVR – RemoteAgent.

The main remote client window is displayed.

REMOTE CLIENT SETUP

Client Software Organization

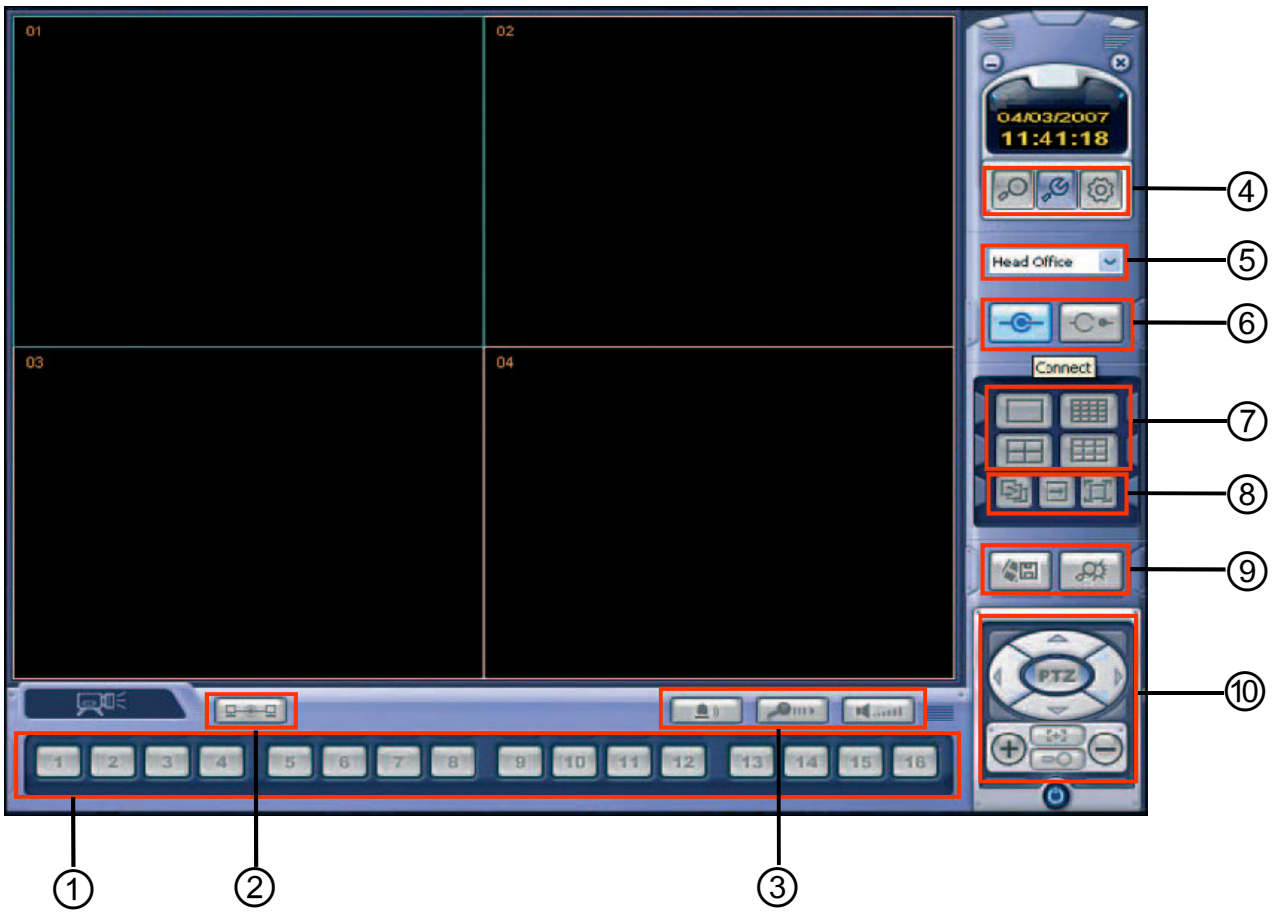

① CHANNEL SELECTION buttons

② STATUS button

③ ALARM button

TALKBACK button

AUDIO button

④ SEARCH button to access remote playback

SETUP button to configure DVR connections

DVR SETUP button to adjust DVR settings remotely

⑤ Head Office

DROP DOWN LIST to select a DVR connection

⑥ CONNECT button

DISCONNECT button

⑦ DISPLAY button to choose 1,4,9 or 16 screen display

⑧ SEQUENCE button

MANUAL SWITCH button

FULL SCREEN button

⑨ SAVE TO AVI button

EVENT VIEWER button

⑩ PTZ CONTROL button

REMOTE CLIENT SETUP

EXPLAINATION OF FUNCTION KEYS

① CAMERA SELECTION Button : Indicate Connected Camera No. & Select camera No to see the image.

② STATUS Button : Show the connected DVR.

③ ALARM Button : Control Alarm output.

TALKBACK Button : Communicate between DVR and Remote Client.

AUDIO Button : Listen live audio (ON/OFF).

④ SEARCH Button : Entering the Search mode to playback the image.

SETUP Button : Entering the client software to change or check the setting.

DVR SETUP Button : Entering the connected DVR to change or check the setting.

⑤ DROP DOWN LIST : Select the group to connect.

⑥ CONNECT Button : Connect DVR.

DISCONNECT Button : Disconnect DVR.

⑦ DISPLAY Button : Change the division screen to 1,4,9 or 16.

⑧ SEQUENCE Button : Change the live screen automatically.

MANUAL SWITCH Button : Change the live screen manually by mouse click.

FULL SCREEN Button : Change to the full screen.

⑨ SAVE TO AVI Button : Save the current displayed image to AVI file.

EVENT VIEWER Button : Show the current event in DVR and find image.

⑩ PTZ CONTROL Button : Control PAN/TILT/ZOOM of camera.

REMOTE CLIENT SETUP

CREATE A CONNECT GROUP

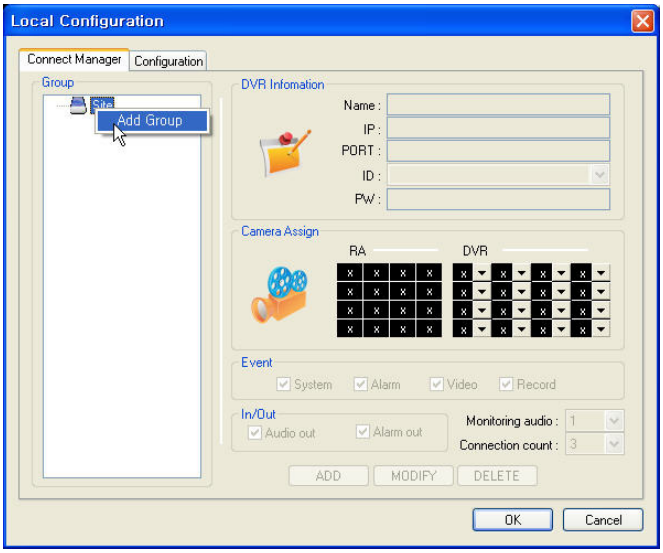

The DVR remote client software can be configured with any number of connection groups.

Each connection group can consist of up to 4 DVRs.

To create a connection group, click the **SETUP** button to display the Local configuration screen.

In the 'Group' window on the left,
right click 'Site' and choose 'Add Group'

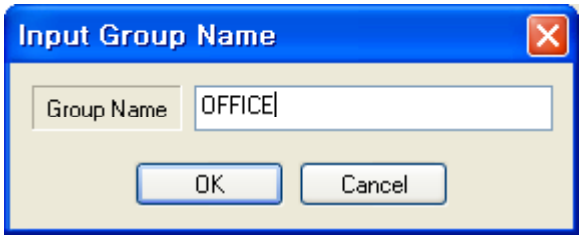

Enter a name to easily identify the connection group and click OK.

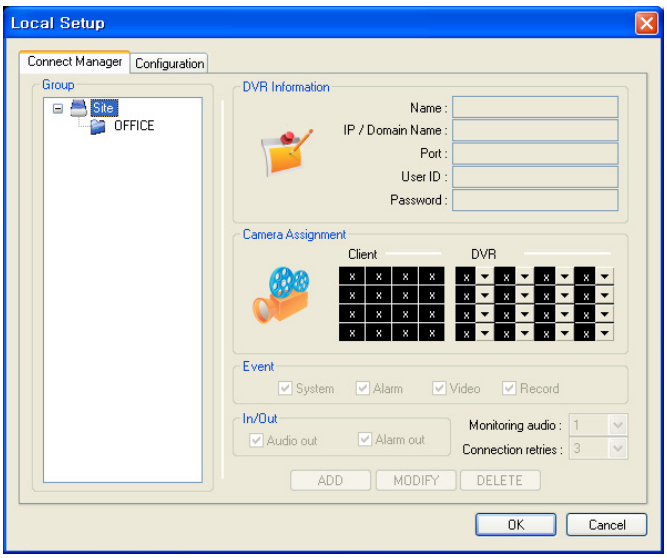

The new group is created.

REMOTE CLIENT SETUP

DETAIL SETUP

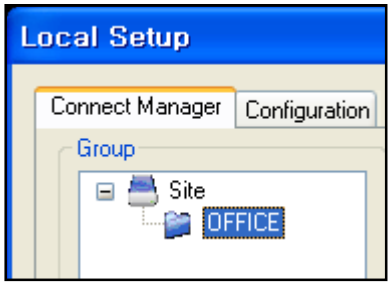

Details for up to 4 DVRs can be added to the 'OFFICE' group. Click 'OFFICE' to highlight it and then enter the following information in the 'DVR Information' window.

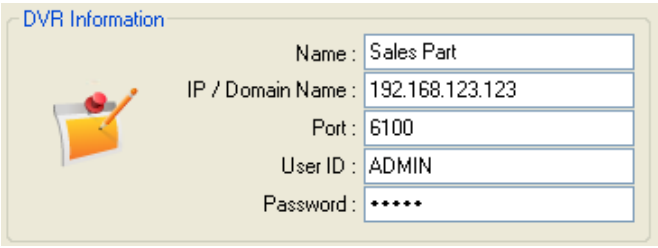

Name: Any name that will easily identify the DVR.

IP / Domain Name: The IP or DDNS address of the DVR.

Port: The network port of the DVR.

User ID: A valid user ID already setup on the DVR.

Password: The password assigned to the user ID.

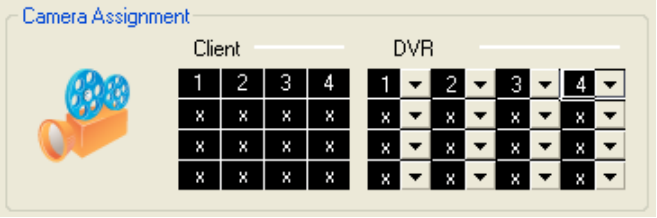

In the 'Camera Assignment' window, specific channels of the DVR can be allocated to the remote client display channels.

Using the drop down lists under DVR, select which channels are displayed and in what position.
To ignore certain channels, leave the drop down as 'x'

In this case, only channels 1-4 from the selected DVR will be displayed.

Note : only one instance of each channel can be selected.

Each connection group can display a total of 16 channels from one or more DVRs. For example, a connection group could consist of one 16ch DVR and display all 16 channels.

Or, it might consist of two 16 channel DVRs and display 7 channels from one and 9 channels from another.

REMOTE CLIENT SETUP

DETAIL SETUP continued

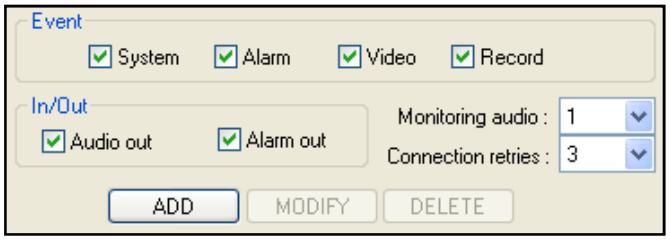

To complete the details for the selected DVR:

-Tick the event occurrences that the DVR will send to the remote client system log.

-Tick 'Audio out' to enable or disable the audio talkback function.

-Tick 'Alarm out' to enable the remote alarm trigger function.

-In 'Monitoring audio' choose which DVR audio input is transmitted to the remote client software during live display.

-In 'Connection retries' choose the number of times the remote client will attempt to connect before giving an error.

Finally, click ADD to save all the details.

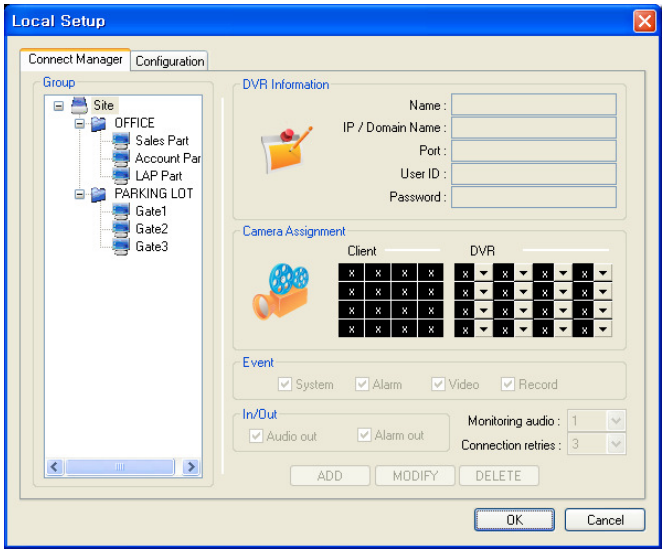

To add up to three more DVRs to this group – simply repeat the steps from the previous page in 'Enter DVR details'.

To create another connection group, repeat the steps from the previous page in 'Create a connection group'

During operation, only one group can be connected at once. For example, 'OFFICE' must be disconnected before connecting to 'Head Office'

REMOTE CLIENT SETUP

ADDITIONAL CONFIGURATION

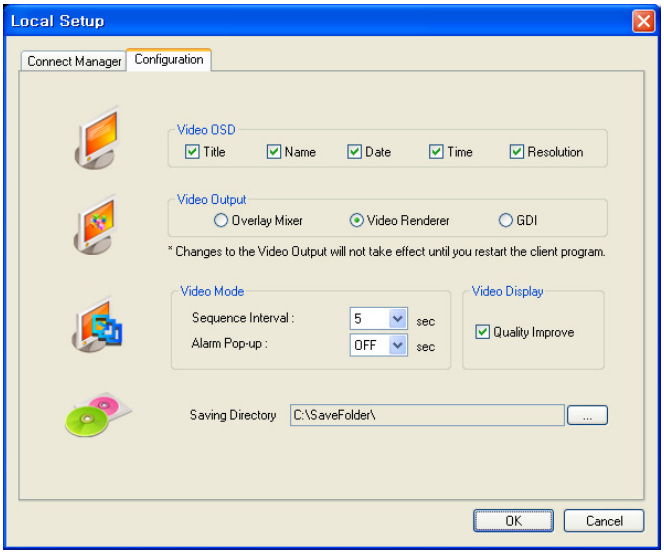

Click the 'Configuration' tab to setup various remote client program options.

Video OSD

Select or deselect the information that is displayed for each channel when a DVR is connected.

Video Output

For best results, leave set at the default of 'Video Renderer'. Overlay mixer and GDI are provided only for backwards compatibility with older PCs.

Video Mode

Define the sequence time between each channel when in sequence mode. Also, determines the full screen popup time when an alarm is triggered on the DVR.

Video Display

For best results, leave 'Quality improve' selected.

Saving directory

Specify the location where AVI files and snapshots will be saved to the local PC.

REMOTE CLIENT SETUP

REMOTE SEARCH

Click the **SEARCH** button to playback.

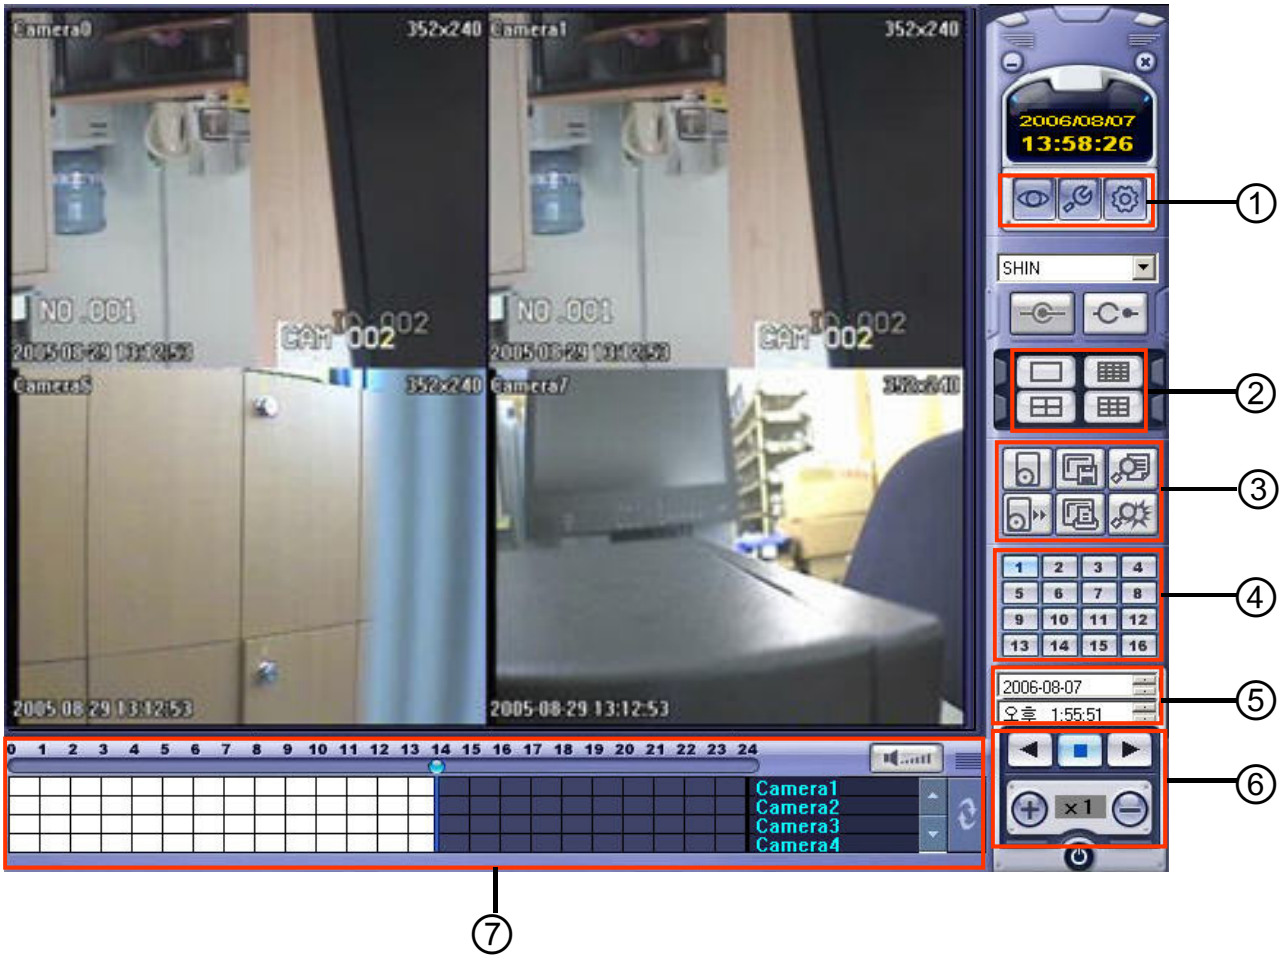

① LIVE button

SETUP button

DVR SETUP button

② DIVISION SCREEN buttons

③ ARCHIVING button (P64)

STILL SHOT button

LOG VIEWER button

BACKUP PLAYER EXCUTE button

PRINT button

EVENT VIEWER button

④ CAMERA SELECTION button

⑤ QUICK SEARCH button

⑥ SEARCH CONTROLLER button

⑦ SEARCH BAR

REMOTE CLIENT SETUP

EXPLAINATION OF FUNCTION KEYS

① LIVE Button : Return to the Live mode.

SETUP Button : Entering the client software to change or check the setting.

DVR SETUP Button : Entering the connected DVR to change or check the setting.

② DIVISIION SCREEN Button : Change the division screen to 1,4,9 or 16.

③ BACKUP Button : Can backup by channel including audio.

STILL SHOT Button : Can save current image.

LOG VIEWER Button : Can see all log records.

BACKUP PLAYER EXECUTE button : Execute the backup player.

PRINT Button : Can print current image.

EVENT VIEWER Button :Can see all event records.

④ CAMERA SELECTION Button : Can select camera number.

⑤ QUICK SEARCH Button : To playback quickly, select date and time.

⑥ SEARCH CONTROLLER Button : Can control search function.

⑦ SEARCH BAR : Displayed recording status.

REMOTE CLIENT SETUP

QUICK SEARCH

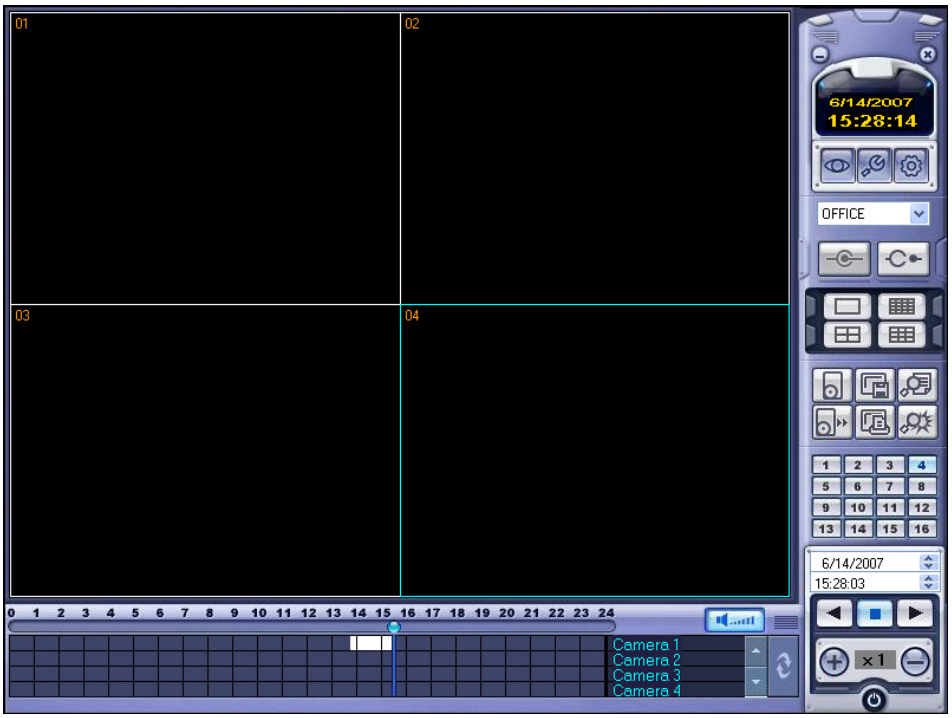

Click the **SEARCH** button in live display mode to switch to search mode.

The **TIMELINE** at the bottom of the display shows a graphical overview of recorded footage for a particular day. White blocks indicate footage for a particular time segment, whilst blue blocks indicate no footage.



Choose the required date by selecting and then adjusting the date value using the up and down arrows.

As different dates are selected, the **TIMELINE** changes to show the status of recorded footage for that particular date.

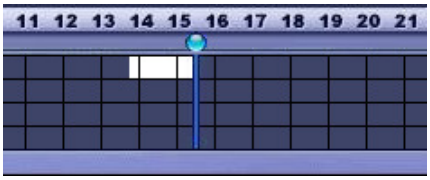

Use the mouse to drag the **CURSOR** to the required time.

The exact time selected is displayed under the date.

Click to begin playback from the selected date and time.

To select reverse play, click

Use + and – to increase or decrease playback speed.

Click to stop playback and choose another time / date if required

REMOTE CLIENT SETUP

ARCHIVING

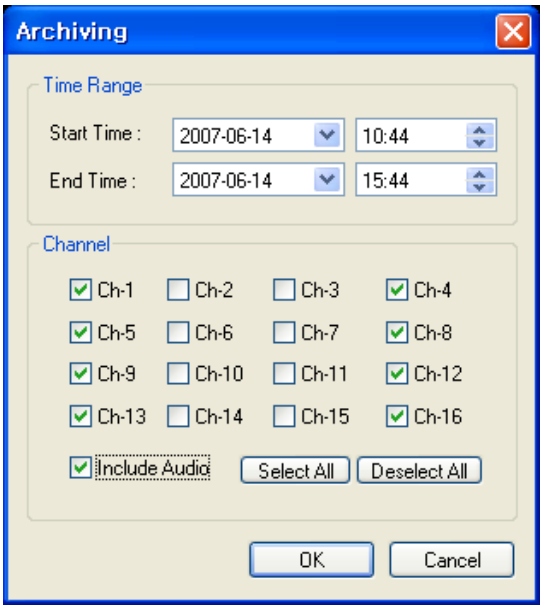

Pre-recorded footage on a DVR can be archived to the local PC hard disk.

Click the ARCHIVE button to show the archiving screen.

Choose start time, end time, which channels to archive and whether to include audio.

For convenience, choosing 'Select All' will highlight all available channels (including audio) for archiving.

Click OK to begin archiving data to the PC hard drive.

STILL SHOT

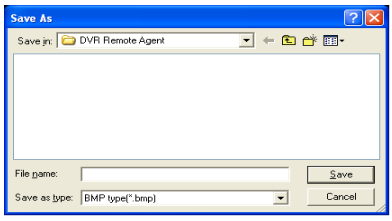

During playback, a still image can be save to the local PC hard disk by clicking the **SNAPSHOT** button.

Specify the file location, file name and choose BMP or JPG format. Click 'Save'.

The snapshot image is saved in the same style as the currently selected screen display, for example, quad screen, single screen etc.

REMOTE CLIENT SETUP

LOG VIEWER

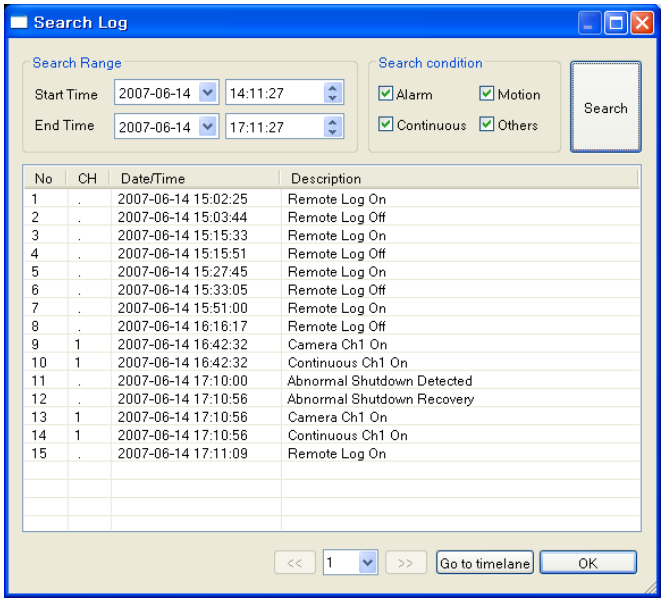
Search Log
Search Range
Start Time 2007-06-14 14:11:27
End Time 2007-06-14 17:11:27
Search condition
Alarm
Motion
Continuous
Others
Search
No CH Date/Time Description
1 . 2007-06-14 15:02:25 Remote Log On
2 . 2007-06-14 15:03:44 Remote Log Off
3 . 2007-06-14 15:15:33 Remote Log On
4 . 2007-06-14 15:15:51 Remote Log Off
5 . 2007-06-14 15:27:45 Remote Log On
6 . 2007-06-14 15:33:05 Remote Log Off
7 . 2007-06-14 15:51:00 Remote Log On
8 . 2007-06-14 16:16:17 Remote Log Off
9 1 2007-06-14 16:42:32 Camera Ch1 On
10 1 2007-06-14 16:42:32 Continuous Ch1 On
11 . 2007-06-14 17:10:00 Abnormal Shutdown Detected
12 . 2007-06-14 17:10:56 Abnormal Shutdown Recovery
13 1 2007-06-14 17:10:56 Camera Ch1 On
14 1 2007-06-14 17:10:56 Continuous Ch1 On
15 . 2007-06-14 17:11:09 Remote Log On
<< 1 >> Go to timelane OK

To search for an event and playback the recorded footage, press the **EVENT SEARCH** button.

Choose the ‘Start time’ and ‘End time’. Select which events to include in the search and click ‘Search’

The event log for the selected time period is displayed.

Select an event, click ‘Go to timeline’ and then click OK .

Click ▸to begin playback from the selected date and time.

BACKUP PLAYER

To view archives backed up from a DVR, double click the player file.

Click to choose which archive file to playback.

Playback of the archive file begins.

The controls under the display can be used to adjust playback direction and speed.

REMOTE CLIENT SETUP

PRINT

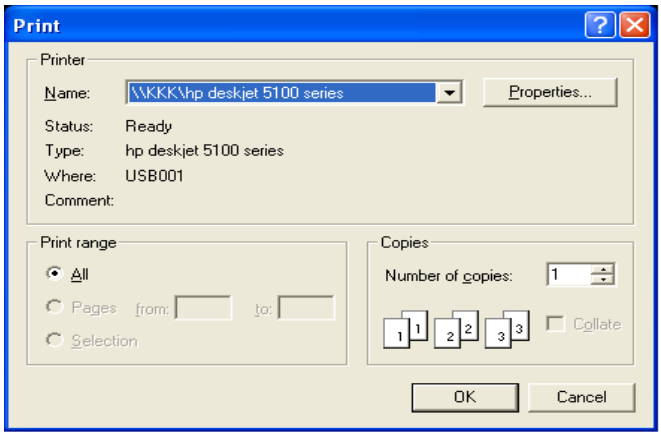

During playback, a still image can be printed on the local PC printer by clicking the **PRINT** button.

The printed image is in the same style as the currently selected screen display, for example, quad screen

EVENT VIEWER

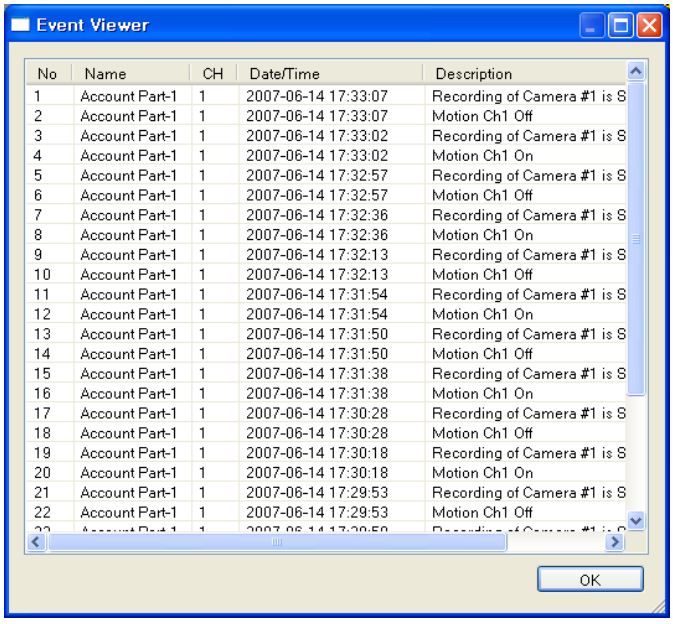
Event Viewer
No Name CH Date/Time Description
1 Account Part-1 1 2007-06-14 17:33:07 Recording of Camera #1 is S
2 Account Part-1 1 2007-06-14 17:33:07 Motion Ch1 Off
3 Account Part-1 1 2007-06-14 17:33:02 Recording of Camera #1 is S
4 Account Part-1 1 2007-06-14 17:33:02 Motion Ch1 On
5 Account Part-1 1 2007-06-14 17:32:57 Recording of Camera #1 is S
6 Account Part-1 1 2007-06-14 17:32:57 Motion Ch1 Off
7 Account Part-1 1 2007-06-14 17:32:36 Recording of Camera #1 is S
8 Account Part-1 1 2007-06-14 17:32:36 Motion Ch1 On
9 Account Part-1 1 2007-06-14 17:32:13 Recording of Camera #1 is S
10 Account Part-1 1 2007-06-14 17:32:13 Motion Ch1 Off
11 Account Part-1 1 2007-06-14 17:31:54 Recording of Camera #1 is S
12 Account Part-1 1 2007-06-14 17:31:54 Motion Ch1 On
13 Account Part-1 1 2007-06-14 17:31:50 Recording of Camera #1 is S
14 Account Part-1 1 2007-06-14 17:31:50 Motion Ch1 Off
15 Account Part-1 1 2007-06-14 17:31:38 Recording of Camera #1 is S
16 Account Part-1 1 2007-06-14 17:31:38 Motion Ch1 On
17 Account Part-1 1 2007-06-14 17:30:28 Recording of Camera #1 is S
18 Account Part-1 1 2007-06-14 17:30:28 Motion Ch1 Off
19 Account Part-1 1 2007-06-14 17:30:18 Recording of Camera #1 is S
20 Account Part-1 1 2007-06-14 17:30:18 Motion Ch1 On
21 Account Part-1 1 2007-06-14 17:29:53 Recording of Camera #1 is S
22 Account Part-1 1 2007-06-14 17:29:53 Motion Ch1 Off
OK

During playback, any live events detected on the DVR are sent to the remote client event log. To display this, click the **CURRENT EVENT LOG** button

REMOTE CLIENT SETUP

REMOTE RECORDING SETUP

Only the ADMIN user can configure a DVR remotely. With the exception of network settings and certain display options, any of the DVR settings can be changed.

ENTERING SETUP

Click the **SETUP** button, enter the correct password for the ADMIN user and click OK

RECORD

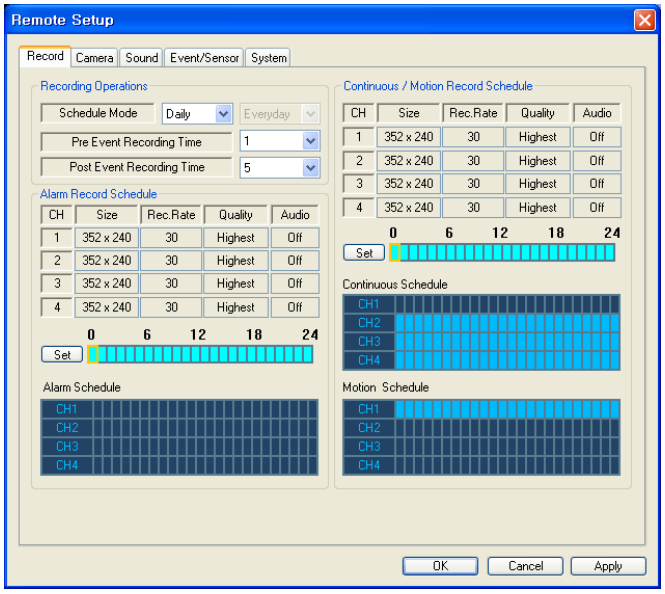

- ***Record Operations***

  Schedule Mode: Select Weekly or Daily.

  Pre Event Recording Time
  : Record image including setting time before event happened. (0 ~ 5 Second)

  Post Event Recording Time
  : Record image including setting time after event happened. (5 ~ 180Second)

- ***Alarm Recording Schedule***

  Click the **SET** Button to set Alarm Recording.

  Setup the size, rec. rate, quality and audio.

- ***Continuous/Motion record Schedule***

  Click the **SET** Button to Continuous/Motion record Schedule.

  Setup the size, rec. rate, quality, audio.

REMOTE CLIENT SETUP

REMOTE RECORDING SETUP continued

CAMERA

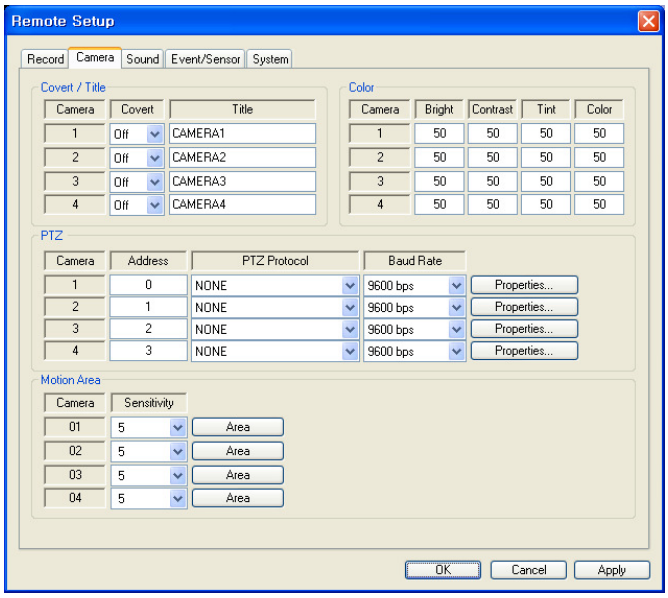

- ***Convert / Title***

  Convert the camera and change the camera name. (Covert function On/Off, Camera Name).

- ***Color***

  Setup the Bright, Contrast, Tint and Color.

- ***PTZ***

  Setup the PTZ camera address, Protocol, Baud rate and Properties for detail setup. .

- ***Motion Area***

  Setup the motion sensitive and motion area.

SOUND

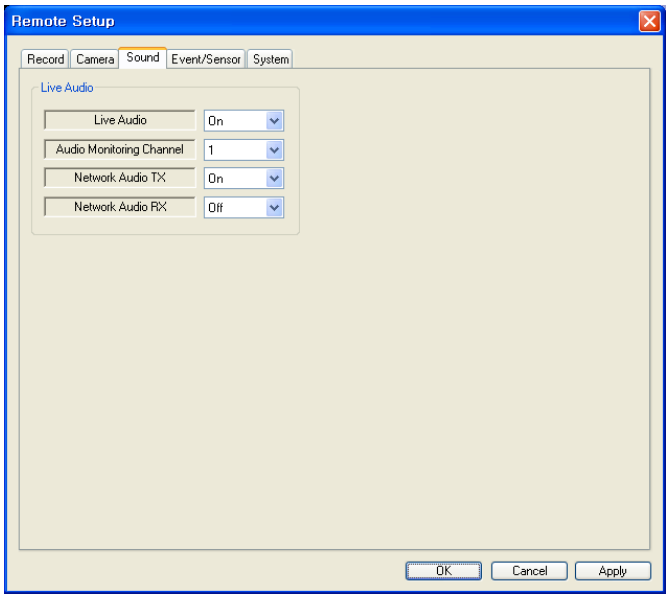

- ***Live Audio Setup***

  Live Audio : On/Off.

  Audio Monitoring Channel
  : Select audio channel for live.

  Network Audio TX
  : Choose the Audio transmission.

  Network Audio RX
  : Choose the Audio receive.

REMOTE CLIENT SETUP

REMOTE RECORDING SETUP continued

EVENT / SENSOR

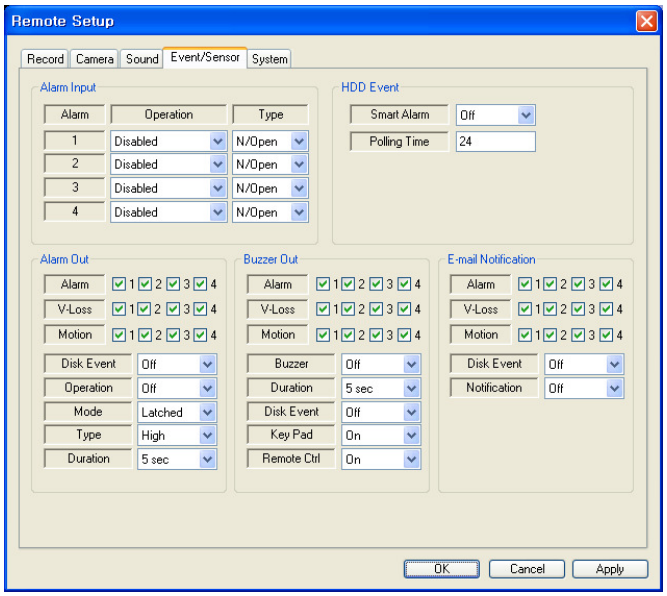

- ***HDD Event***

  Smart Alarm: On/Off.

  Polling Time: HDD Checking Time.

- ***E-mail Notification***

  Check t he E-mail Notification.
  (Alarm, Video Loss, Motion)

  Disk Event: Select the E-mail notification On & Off for sending e-mail when HDD got a any event.

  Notification: Select On & Off for using this function.

- ***Alarm Input***

  Setup the Alarm Connection & Type of each channel. (Enable /Disable, Normal Open / Normal Close)

- ***Alarm Out***

  Check the Alarm out event. (Alarm, Video loss, Motion)

  Disk Event : Select Alarm On & Off for Alarm out when HDD got a problem.

  Operation : Select usage of the Relay Connection with Alarm Sensor or not.

  Mode: Select the reacted relay. (Latched/Transparent)

  Type: Select the relay type. (Normal Open / Normal Close)

  Duration: Setup the reacted relay time duration. (5seconds to 5minutes or Until key-in)

- ***Buzzer out***

  Check the Buzzer out event. (Alarm, Video loss, Motion)

  Buzzer : Select the buzzer On & Off for buzzer sound.

  Duration : Setup the Buzzer time duration. (5seconds to 5minutes or Until key-in)

  Disk Event: Select Buzzer On/Off for Buzzer when HDD happened any event.

  Keypad : Select buzzer sound On & Off when key input.

  Remote Ctrl : Select buzzer sound On & off when remote controller input.

REMOTE CLIENT SETUP

REMOTE RECORDING SETUP continued

SYSTEM

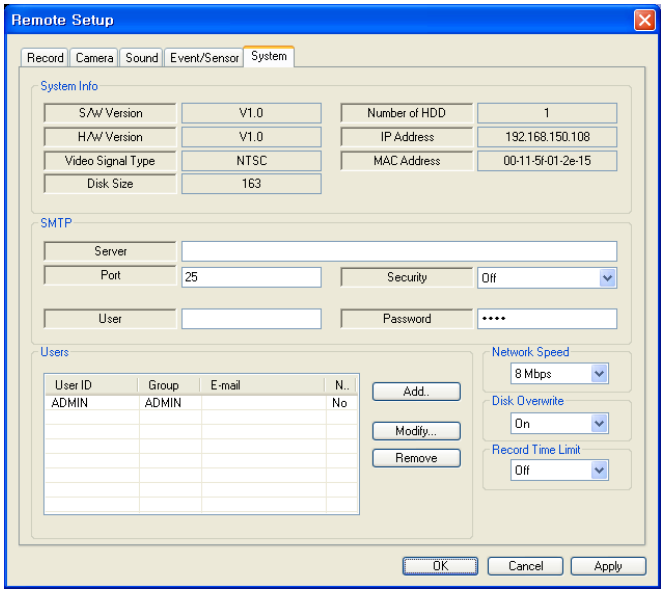

- ***System Info***

  Check the DVR System information.

- ***SMTP***

  Type the SMTP server name and user ID & password to use E-mail notification.

- ***Users***

  Add or delete any user.

- ***Network Speed***

  Select the network speed.

- ***Disk Overwrite***

  Select the On & Off for using disk overwrite.

- ***Record Time Link***

  Select the recording period.